

## RRC-TC107W / RRC-TC107B

### Microcomputer Rice Cooker

### 微電腦電飯煲



僅供家庭使用

For household use only

## 使用說明書

### OPERATION MANUAL

- 在使用本產品前，應仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。  
Read the operation manual carefully before using. Keep it in a safe place for future reference.
- 本說明書中的圖示可能與實物有不同的地方，僅供參考。  
Some figures in the manual may not match with the real object, just for reference only.



非常感謝您選購樂信牌微電腦電飯煲，使用前應先詳細閱讀本說明書，並保存以備日後參考。

## 目錄

1. 安全注意事項
2. 清潔及儲存
3. 產品規格
4. 產品說明
5. 使用方法
6. 故障排除
7. 特別聲明
8. 售後服務

## 1. 安全注意事項


使用本產品時，必須遵守下列安全措施：

1. 切勿讓小孩單獨使用、清潔及維修保養電飯煲或把其當作玩具。將電飯煲及其電線放於小孩不能觸及的地方。
2. 切勿讓電飯煲在無人看管下運作，以及沒有裝載內鍋或未放入食物的情況下操作本產品。
3. 為避免燙傷，使用時或剛使用後，切勿將臉或手靠近上蓋或蒸氣口；切勿觸摸剛使用後的發熱盤及內鍋，因仍有餘熱。
4. 切勿把機身、電源線或連接器插頭浸入水中；或被水濺濕，以免造成觸電及火災。
5. 為免危險，須按照本說明書建議方法使用，切勿在室外使用或作其他用途。如錯誤操作，可造成傷害。
6. 使用前，確保電源線兩端的插頭已分別插穩在電飯煲及電源插座上。
7. 僅可使用220V的交流電源。
8. 應單獨使用額定電流10A以上的插座，如與其他器具合用，其分支插座會異常發熱而引起火災。
9. 如運作時電源線和插頭有部份發熱、漏電、斷電或插頭鬆動，都不可使用，以免造成觸電及火災。
10. 切勿讓兒童或嬰兒接觸此產品。否則可能引起觸電、燙傷或受傷。
11. 手濕時切勿接觸、插入或拔除插頭，否則可構成觸電的危險。
12. 本產品只可作家庭或類似環境使用，如商店內部、辦事處和其他工作環境的員工廚房區域；農舍；在酒店、汽車旅館以及其他居住環境中供客人使用；在提供住宿及早餐的類型環境中使用。
13. 切勿使用有殘缺或鬆動的插座。使用前，確保插頭已充分擦乾。
14. 切勿擅自改裝電飯煲或使用非生產商提供的零件進行修理，否則可造成危險及維修保養無效。
15. 此電飯煲可供年齡在 8 歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用電飯煲和理解所涉及的危險。
16. 使用時，切勿用任何物件覆蓋電飯煲表面或遮擋蒸氣口，以免造成電飯煲故障、變形或變色。
17. 經常檢查電飯煲、內鍋、電源線及插頭，如有損壞，為避免危險，應立即停止使用，並聯絡**信興電器服務中心有限公司**安排檢查及維修。
18. 切勿使用其他器皿來取代原裝內鍋。
19. 使用前，確定內鍋外部及發熱盤表面清潔乾爽，否則可能引致故障。
20. 切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面，否則會損壞電源線。
21. 使用時，切勿打開上蓋、移動或搖晃電飯煲，以免造成危險。

22. 切勿使用內鍋直接洗米，以免損害內鍋表面的塗層，影響烹調效果。
23. 切勿用內鍋烹調酸性或鹼性的食物，以免損壞內鍋塗層。
24. 在插入或拔除插頭時，應手握穩插頭本身，不要抓住電源線。
25. 切勿在以下環境使用電飯煲：
  - 潮濕或近水的環境
  - 靠近熱源如電焗爐、電磁爐及火源
  - 不平穩的表面上
  - 易燃物料或不耐熱物品附近(如枱布、窗簾及毛巾等)
26. 不可在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。
27. 產品在運作時或完成運作後，切勿直接觸碰內鍋，以防止燙傷。
28. 依照本說明書放入適量的米和水並正確選擇功能。以免米水溢出、半生不熟、焦米、煮干、燒焦等現象，嚴重時將會影響內鍋的使用壽命。
29. 插入電源線時，必須插到底，以確保接觸良好。
30. 應時常保持電源線插頭和插座的乾爽，禁止用濕手插拔電源線插頭。
31. 在產品工作過程中按「開始/取消」鍵將返回到待機狀態，此時再重新啟動功能，內鍋中的食物可能因多次加熱而導致燒焦或出現其他異常現象，在日常使用中避免此類操作。
32. 加熱開水煮飯/煮粥並不能縮短煮食時間，只會使飯粒夾生或煮更爛，須注意使用。
33. 首次使用產品時，可能有輕微異味，顯示屏在剛通電時，可能顯示閃爍，請拔下插頭重新通電。以上兩種情況屬正常現象，可放心使用。
34. 內鍋及頂面為易碎材質，慎防與硬物碰撞及從高處跌落，造成破碎損壞。
35. 使用前，確定內鍋外部及產品內部表面清潔乾爽，否則可能引致故障。
36. 確保上蓋蓋緊，避免因密封不良而影響煮食效果，同時避免發生故障及其他事故。
37. 取出內鍋前，務必先將電源線插頭拔掉。
38. 切勿注水於發熱盤，使用前留意內鍋外側(尤其是底部)和電飯煲內側(尤其是發熱盤)確保表面無水珠或其他雜物，並確保內鍋與發熱盤接觸良好。


## 2. 清潔及儲存

1. 清潔前，必須拔除電源插頭，並待電飯煲完全冷卻。
2. 清洗內鍋和內蓋時，應使用海綿等軟性物料及清潔劑，用水沖洗後再抹乾及裝回原位。
  - 如有食物黏在內鍋，清洗前可先用水浸泡一會。
  - 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)清潔。

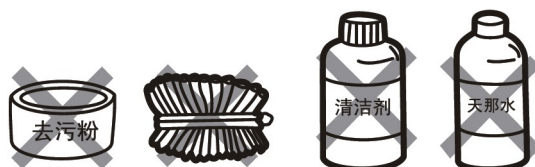

3. 如發熱盤、機身或上蓋有污穢，可用濕布抹淨後再抹乾。
4. 為免損壞內鍋塗層，盛飯時須使用原裝飯勺，切勿使用金屬餐具或在內鍋中切割食物。
5. 長時間使用後，內鍋表面可能會變色，此乃正常現象並不會影響食物安全及內鍋的使用。
6. 儲存時，將電飯煲放入紙箱並放置在乾爽的環境中。
7. 儲存時，切勿將電源線纏繞在電飯煲四周或壓住電源線，以免造成電源線損壞。
8. 使用產品後應及時清洗，防止一些污垢緊緊地附著在產品或配件表面而難以去除。
9. 切勿將產品主機浸水或用水淋洗，可用柔軟的濕布擦拭。
10. 內鍋適宜用乾淨軟布或毛巾擦拭，清洗過程中切勿使用硬質鋼絲擦拭。
11. 長時間不使用產品時，在清潔擦拭後，裝入包裝箱中，存放於通風乾燥的地方，以免受潮，影響使用。


### 內蓋的拆卸及安裝

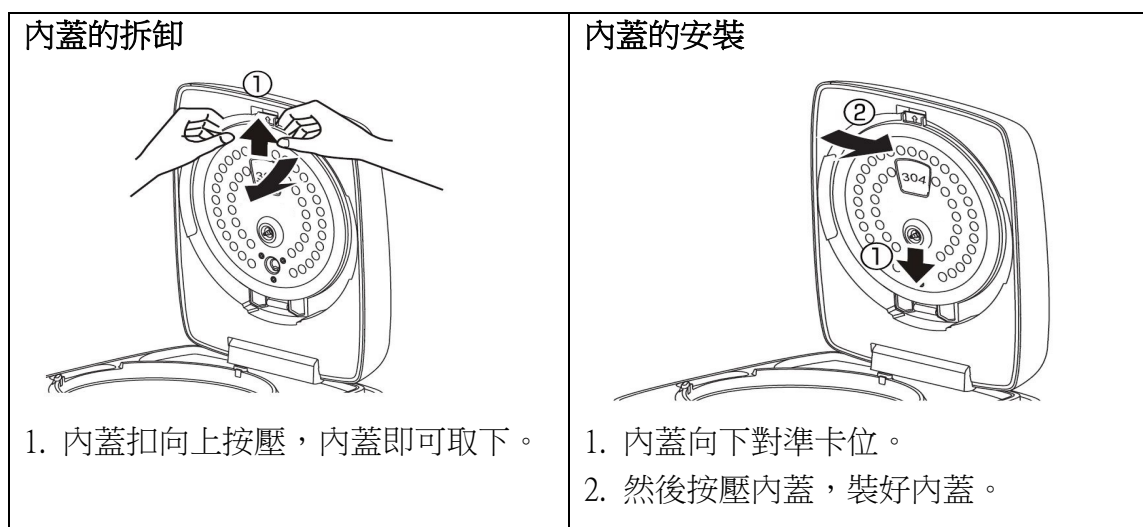

### 3. 產品規格

型號	RRC-TC107W	RRC-TC107B
顏色	白色	黑色
額定電壓	220-240 伏特~ 50-60 赫茲	
額定功率	460 瓦	
容量(約)	2 升	
煮米量(最多 3.5 杯米)(約)	0.7 升	
淨重(約)	2.6 公斤	
產品尺寸 (闊 x 深 x 高) (約)	236 x 282 x 191 毫米	

## 4. 產品說明

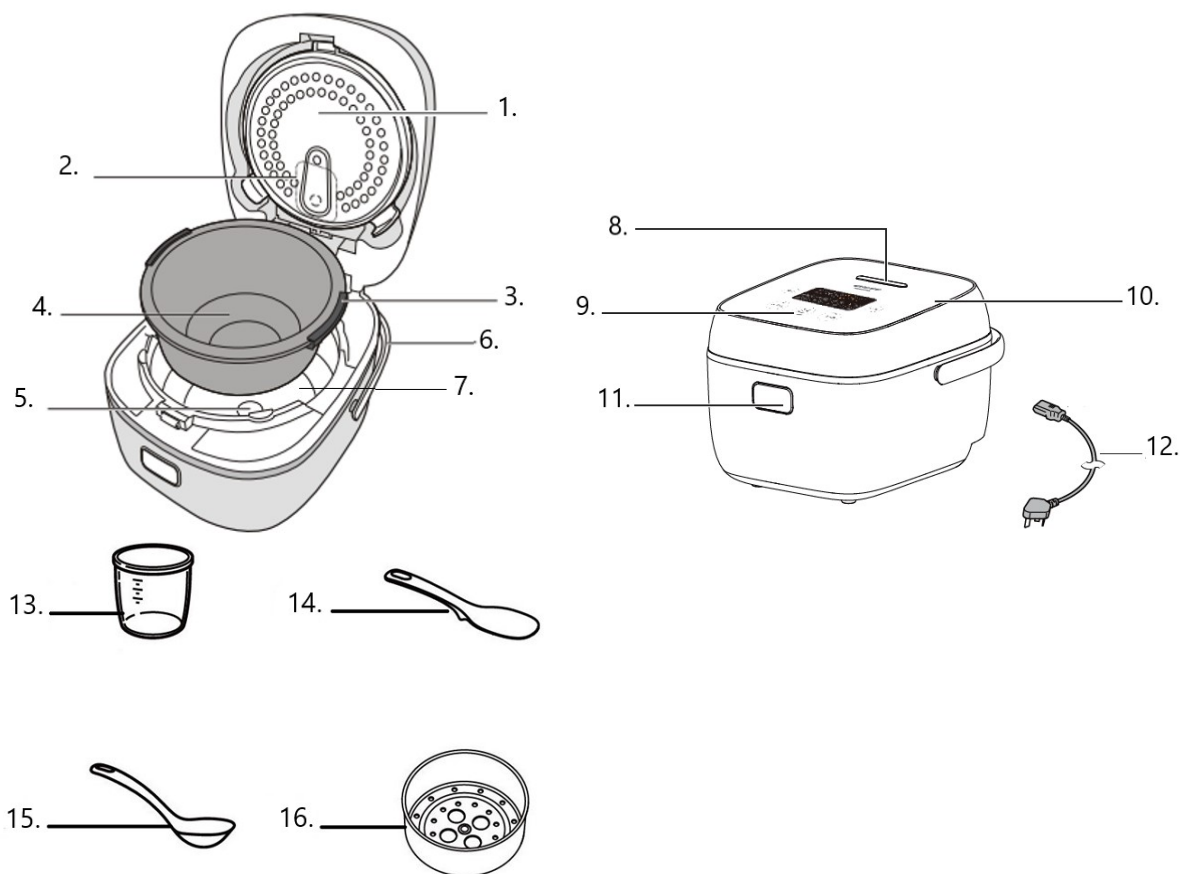

### 產品機身

1. 內蓋
2. 蒸氣閥組件
3. 內鍋提手
4. 內鍋
5. 鍋底溫度傳感器
6. 手提
7. 發熱盤
8. 蒸氣出口
9. 控制面板
10. 上蓋
11. 開蓋按鈕
12. 電源線


### 產品配件

13. 量杯
14. 飯勺
15. 湯勺
16. 蒸籠

(以上圖片僅供參考，以實物為準)



## 控制面板

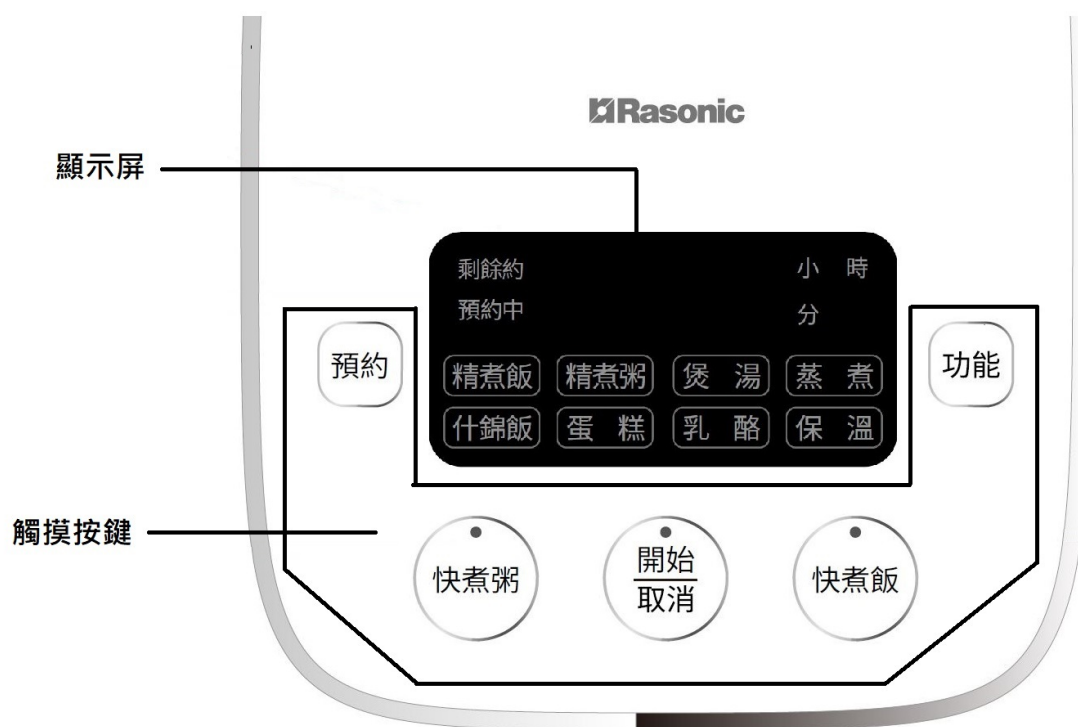

## 內鍋水位刻度




(以上圖片僅供參考，以實物為準)


## 5. 使用方法

### 5.1 基本步驟


1. 輕按開蓋按鈕，打開電飯煲上蓋。
2. 根據需要的飯量和功能決定用米的量，並用附帶的量杯正確量米。裝滿一杯米約為 180 毫升。請按下圖正確量米：

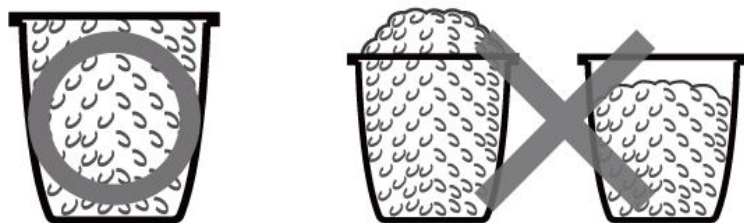

3. 切勿直接使用產品內鍋洗米，應將量好的米倒入其他器皿中清洗後，再倒進產品內鍋。
4. 將鍋內的米鋪平，並確保內鍋放在水平的台面上。根據功能及放入米的杯數確定所需加水量。亦可根據個人口味進行調節。
5. 將內鍋放入主機中，關閉上蓋。合上上蓋，直到聽到「嗒」的一聲。
6. 內鍋放入主機前，必須把內鍋外側及鍋底溫度傳感器上附著的水滴及異物擦拭乾淨。
7. 內鍋放入主機後，輕輕轉動數下，確保內鍋把手對準放在主體的把手位置上。

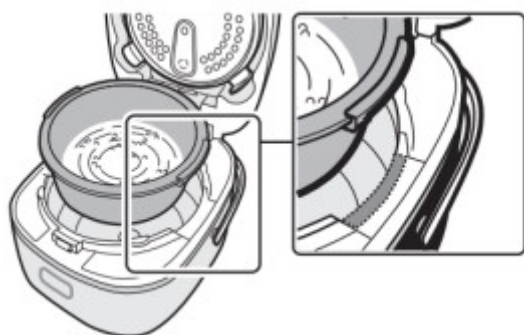

8. 檢查蒸氣閥組件及內蓋是否已裝好。

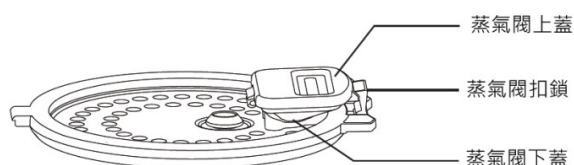

## 5.2 烹飪方法

先將食材放入內鍋，並根據水位刻度指示加入適量的水，關閉上蓋，然後按控制面板使用本產品：

1. 接通電源後，按「功能」鍵選擇烹飪功能，可選擇精煮飯、精煮粥、煲湯、蒸煮、什錦飯、蛋糕、乳酪及保溫，或獨立按「快煮飯」、「快煮粥」鍵選擇烹飪功能。選擇其中一個功能，對應的烹飪時間會於顯示屏上顯示。
2. 每次按動「功能」鍵，都會聽到「嗶」的一聲，對應功能的指示燈會亮起，"開始/取消" 指示燈會閃爍。若持續無操作約 60 秒，產品將在「滴滴」聲後返回待機狀態，不會開始烹飪。
3. 按「開始/取消」鍵後，蜂鳴器發出「嗶」的一聲，對應功能的指示燈長亮，產品進入烹飪狀態。顯示屏會顯示剩餘烹飪時間。  
**注意!** 默認狀態為精煮飯功能，每次使用需自行選擇烹飪功能，如直接按「開始/取消」鍵，產品會啟動精煮飯功能。
4. 在烹飪過程中，如果要中斷烹飪，可長按「開始/取消」鍵約 3 秒，烹飪功能將會取消，產品會返回待機狀態。
5. 烹飪結束時，蜂鳴器長鳴 4 次，"開始/取消" 指示燈亮起，產品進入保溫模式。保溫功能指示燈長亮，顯示屏顯示已保溫時間。  
**注意!** 不要將食物保溫時間超過 12 小時。(可能會導致食物烤焦發黃或發出異味)
6. 按「開始/取消」鍵取消保溫模式，產品會復回待機狀態，然後拔掉電源。  
**注意!** 當使用舊米、糯米等特殊米種時，或須加入其它材料或調味料一起烹煮時，建議選擇精煮飯或精煮粥功能。

### 5.3 預約功能

此功能只適用於精煮飯、精煮粥、煲湯、蒸煮、什錦飯等功能。預約功能最長可支援 24 小時的預約，預約功能顯示的時間為烹飪完成的時間。

**注意!** 若進行長時間預約烹飪，請注意食材保質時間。

1. 按「功能」鍵選擇可預約功能

**注意!** 部分功能無法預約，無法進行下一步操作。

2. 按「預約」鍵進入預約功能，預約時間默認為 4 小時，顯示窗指示燈和數字閃爍後，再按「預約」鍵來調整時間，短按為 10 分鐘遞增，長按為 30 分鐘遞增。
3. 完成後，按「開始/取消」鍵確認預約。
4. 如需取消預約設定，長按「開始/取消」3 秒取消預約設定。
5. 如需更改預約時間或功能設定，須先取消預約設定後再重新設定。

### 5.4 蒸煮功能

1. 先加水至內鍋，**注意!** 不要超過蒸最高水位，然後放入蒸架及食物。
2. 按「功能」鍵選擇蒸煮功能，按「開始/取消」鍵後，再按「功能」鍵調較蒸煮時間，短按為 1 分鐘遞增，長按為 5 分鐘遞增。
3. 當「蒸煮」鍵亮起及“開始/取消”指示燈亮起紅燈表示產品進入蒸煮狀態。

**注意!** 如運作途中揭蓋並不會停止功能運作。

5. 如直接斷停後再接上電源，蒸煮功能會繼續運作。

**注意!** 設定時間並不包括將水煮沸的時間，因此實際運行時間會較設定時間為長。

### 5.5 蛋糕功能的注意事項

雞蛋、面粉、水的混合物切勿超過白米刻度 1.5 杯的位置，否則，蛋糕在烘烤過程中會膨脹並容易堵住出氣口，有可能引起本產品上蓋炸開的危險。

## 5.6 功能運作時間表

各功能的烹調容量及時間如下圖示：

烹調功能	烹調最多份量 (米量 / 水尺)	預計烹調時間(約)	可調節時間	保溫時間(約)
精煮飯	1-3.5 杯/白米	55 分鐘	不可調	12 小時
快煮飯	1-3.5 杯/白米	28 分鐘	不可調	12 小時
什錦飯	1-2 杯/什錦	1 小時 50 分鐘	不可調	12 小時
煲湯	湯最大水位	1 小時 30 分鐘	不可調	12 小時
精煮粥	0.5- 1 杯/粥 0.5 杯/稀粥	1 小時 30 分鐘	不可調	12 小時
快煮粥	0.5-1 杯/粥 0.5 杯/稀粥	30 分鐘	不可調	12 小時
蒸煮	蒸最高水位	20 分鐘	1-30 分鐘	12 小時
保溫	--	--	--	12 小時
乳酪	--	8 小時	--	--
蛋糕	混合物切勿超過 白米 1.5 刻度	40 分鐘		

### 注意：

1. 功能的實際時間會根據米量、水量、電壓、室溫、水溫及米質的不同而變化。
2. 米飯的軟硬會因米量、水量及米質的不同而影響，並有可能形成鍋巴。
3. 用戶可按個人喜好適量地調節水量。
4. 根據各種食材的特性，設定合適的預約時間。預約時間不宜過長，否則可能導致食材變質。
5. 煮飯功能不可用作於煲湯、煮粥，用戶必須選擇合適的功能進行烹調。

## 5.7 保溫功能

1. 煲飯完成後，自動轉入保溫狀態。或在顯示屏按「功能」鍵至保溫指示燈閃亮，再按「開始/取消」鍵進入保溫狀態。當「保溫」標示亮起及“開始/取消”指示燈亮起紅燈表示產品進入保溫狀態。
2. 保溫時，偶爾將米飯翻鬆及關上上蓋，以免米飯變乾及結塊。
3. 保溫最長為 12 小時，之後，產品會自動轉回待機狀態。
4. 切勿將米飯或食物過長保溫時間，否則會產生鍋巴、異味或食物變質。
5. 如須取消保溫功能，可在保溫狀態下按「開始/取消」鍵。
6. 如直接斷停後再接上電源，保溫功能會繼續運作。

**注意!** 酸奶功能並沒有保溫功能，完成烹調後將直接返回待機狀態。

## 6. 故障排除

故障現象	成因	排除方法
指示燈不亮	電源線插頭沒有插好	將電源線插頭重新插入到位
	電源線插頭或內部零件損壞	聯絡 <b>信興電器服務中心有限公司</b> 進行檢查及維修
煮飯、煮粥底部燒焦或煮不熟	米量和水量比例不正確	調整加水量
	內鍋底部污穢或有異物	用濕布清潔乾淨
	頂蓋未蓋緊	將頂蓋蓋緊
	產品故障	聯絡 <b>信興電器服務中心有限公司</b> 進行檢查及維修
煮飯、煮粥時溢出	水或米量太多	避免高於功能的最高水位刻度線，詳情可參考“章節 5.6 功能默認時間表”
功能失靈	電源被干擾	拔除電源線插頭 20 秒後，再重新通電，如情況持續，請聯絡 <b>信興電器服務中心有限公司</b> 進行檢查及維修。
顯示屏出現 F1, F2, F3, F4, C2, C7, C8	產品故障	聯絡 <b>信興電器服務中心有限公司</b> 進行檢查及維修。

## 7. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電**信興電工工程有限公司**：2861 2767。

## 8. 售後服務

信興電工工程有限公司(“本公司”)授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。(“服務中心”)保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

Thank you for choosing Rasonic Microcomputer Rice Cooker. Read the manual carefully before using and well keep it for future reference.

## **Table of Contents**

1. Important Safeguards
2. Cleaning and Storage
3. Product Specifications
4. Product Description
5. Operation Instructions
6. Troubleshooting
7. Special Avowal
8. After Sales Service



## **1. Important Safeguards**

When using the appliance, follow the below safety precautions:

1. Never allow children to operate, clean, perform maintenance on the appliance alone or play as toy. Put the appliance and its power cord in a place not reachable by children.
2. Never leave the appliance unattended when in use, do not or operate without inner pot or food inside.
3. To avoid burns, do not get your face or hands close to the lid or steam outlet during use or right after use; never touch the heating plate and inner pot which are subject to residual heat right after use.
4. Never immerse the main body, power cord or adaptor plug in water or let them wet, it can cause electric shock or fire.
5. To avoid danger, use the appliance according to the operation manual. Do not use it outdoors or other purpose. Misuse can cause injury.
6. Before use, make sure both ends of the power cord are plugged in tightly on the appliance and the power socket.
7. Only alternating electric current at 220 Volts can be used.

8. Use only a power outlet rated at 10 Amperes above. Otherwise, it can cause fire as power outlet is overheated.
9. To avoid fire, stop to use the product if it is found the power cord and socket are heated, power leakage or shortage, or loose.
10. To avoid electric shock, scalding or injuries, never allow children to operate alone, and put the appliance in a place not reachable by baby.
11. Do not touch, plug in or remove the plug with wet hands, it can cause electric shock.
12. The appliance is intended to be used in household or similar applications such as staff kitchen in shops, offices and other working environments; farm houses; by clients in hotels; motels; other residential type environments; bed and breakfast type environments.
13. Do not use deficient or loosen socket. Make sure the plug is dry before use.
14. Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and warranty will become invalid.

15. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
16. When in use, do not cover the appliance surface or steam vent with any objects to avoid appliance malfunction, deformation or discoloration.
17. Always check the condition of rice cooker, inner pot, power cord and plug. To avoid hazard, stop using the appliance immediately and contact **Shun Hing Electric Service Centre Limited** for checking and repairing if any of the parts is damaged.
18. Do not use other container to substitute the original inner pot.
19. Make sure the inner pot outer surface and heating plate are clean and dry before use, otherwise it may cause malfunction.
20. Do not operate the appliance when the power cord is tangle or hang the power cord over the edge of table, counter-top or let it touch any hot surface, it may cause power cord damage.
21. Do not open the lid, move or shake the appliance when in use, it can cause danger.

22. Do not wash rice directly inside the inner pot to avoid scratching the coating and affect the cooking results.
23. Do not cook acidic or alkaline food in the inner pot to avoid damage on the inner pot coating.
24. Grasp the plug itself when plug in or unplug the appliance, do not grasp the power cord.
25. Do not operate the appliance in the following places:
  - Humid environment or near water
  - Near heat sources such as electric oven, induction cooker and fire
  - Unstable surface
  - Near inflammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.)
26. Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord.
27. Do not directly touch the inner pot while the appliance is cooking or after use to prevent burns.
28. Please put in correct amount of rice and water and select functions correctly according to the operating instructions. So as to avoid overflow of rice water, half-cooked rice, scorched rice, boil-dry, burnt, etc. In serious cases, it will affect the service life of the inner pot.
29. Insert the power plug firmly to ensure well connection.

30. Keep the power plug and power socket dry. Do not touch the appliance, plug or unplug the power plug by wet hand.
31. If the product presses the **【Start/Cancel】** (開始/取消) button during operation, it will return to the standby state. At this time, the function will be restarted. The food in the inner pot may be burned or have other abnormal phenomena due to repeated heating. Please Avoid such operations during use.
32. Do not cook with hot water, it will affect the thermostat operation and the rice texture.
33. When the product is used for the first time, there may be a slight smell. The display may flash when the power is first turned on. Unplug the product and power it on again. The above two situations are normal, please feel free to use them.
34. The inner pot and glass cover are made of fragile materials, be careful and prevent it from crashing with other hard objects or falling down from a high place.
35. Make sure the inner pot outer surface and heating plate are clean and dry before use, otherwise it may cause malfunction.
36. Ensure to close the lid tightly, avoid opening the lid to affect rice texture and cause malfunctions or other accidents.

37. Before taking out the inner pot, be sure to unplug the power cord.

38. Do not pour water into the heating plate. Before use, pay attention to the outside of the inner pot (especially the bottom) and the inside of the rice cooker (especially the heating plate) to ensure that there are no water beads or other debris on the surface, and make sure that the inner pot is in good contact with the heating plate.

## 2. Cleaning and Storage

1. Before cleaning, unplug and let the rice cooker cool down completely.
2. When clean the inner pot and lid, please use soft material such as sponge and mild detergent. Rinse with water and rub them dry. Put them in place after cleaned.



Inner pot



- If food residual sticks on the inner pot, please soak the inner pot with water for a while before cleaning.
- Never use poisonous or corrosive detergent or harsh tools (e.g. metal-wired brush) for cleaning.



3. If dirt is attached on the heating plate, main body or lid, use a damp cloth to clean and wipe them dry.



4. To avoid damage on the inner pot coating, use original rice scoop when serving rice, never use metal utensils or cut food in the inner pot.

5. The color of inner pot may change after using a period of time, however it does not affect the food hygiene and function of the inner pot.
6. When store, put the appliance in a box and store in a dry place.
7. When store, never wrap the power cord around the appliance or clip the power cord to prevent power cord damage.
8. Clean the product in time after use to prevent some dirt from tightly adhering to the surface of the product or accessories and making it difficult to remove.
9. Do not rinse or immerse the main unit in any liquid. Clean it with a soft damp cloth.
10. The inner pot should be clean with a soft cloth or towel. Do not use hard steel wire to wipe it during cleaning.
11. When the product is not used for a long time, please clean it and wipe it before putting it into the packaging box. It should be stored in a ventilated and dry place to avoid moisture and affecting its use.

## Inner lid detaching and installing

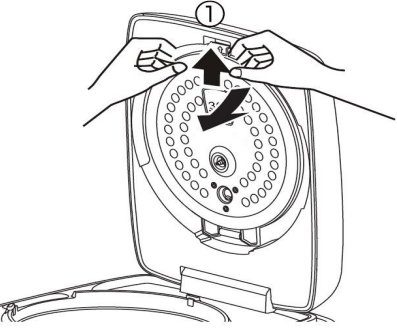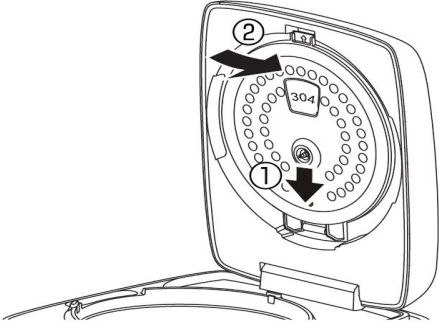
Detach the inner lid	Install the inner lid
 <ol style="list-style-type: none"><li>1. Press the inner lid buckle and take the inner lid off.</li></ol>	 <ol style="list-style-type: none"><li>1. Insert the bottom of the inner lid into the lid cover slot.</li><li>2. Press it to the lid.</li></ol>

### 3. Product Specification

Model	RRC-TC107W	RRC-TC107B
Color	White	Black
Rated Voltage	220-240V ~ 50-60Hz	
Rated Power	460W	
Capacity (approx.)	2 L	
Cooking capacity (max. 3.5 cups rice) (approx.)	0.7 L	
Net Weight (approx.)	2.6 kg	
Product Size (W x D x H) (approx.)	236 x 282 x 191 mm	



## 4. Product Description

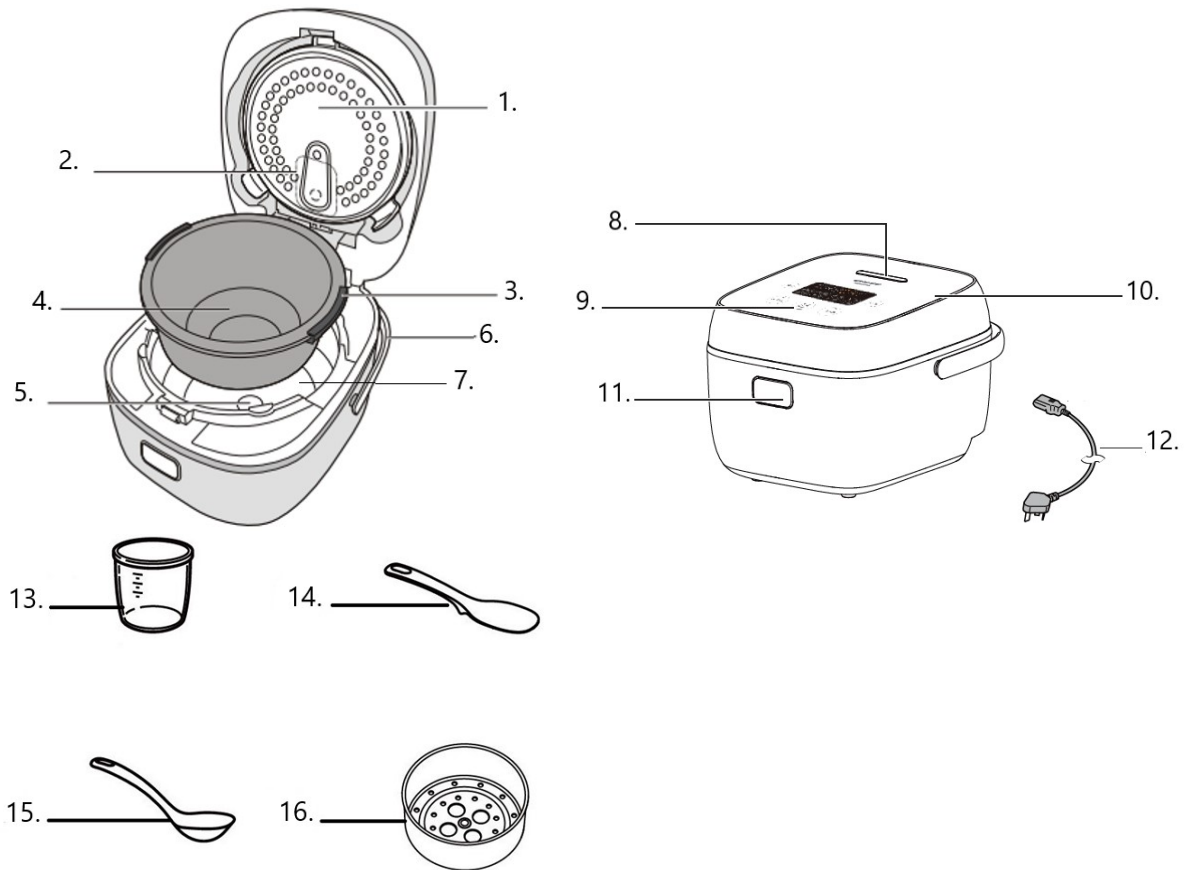

### Product


1. Inner lid
2. Steam valve set
3. Inner pot handle
4. Inner pot
5. Inner pot sensor
6. Handle
7. Heating Plate
8. Steam vent
9. Control panel
10. Lid
11. Lid open button
12. Power cord

### Accessories

13. Measuring cup
14. Rice scoop
15. Soup scoop
16. Steaming basket

(Above diagram is for reference only, subject to actual product.)

## Control Panel

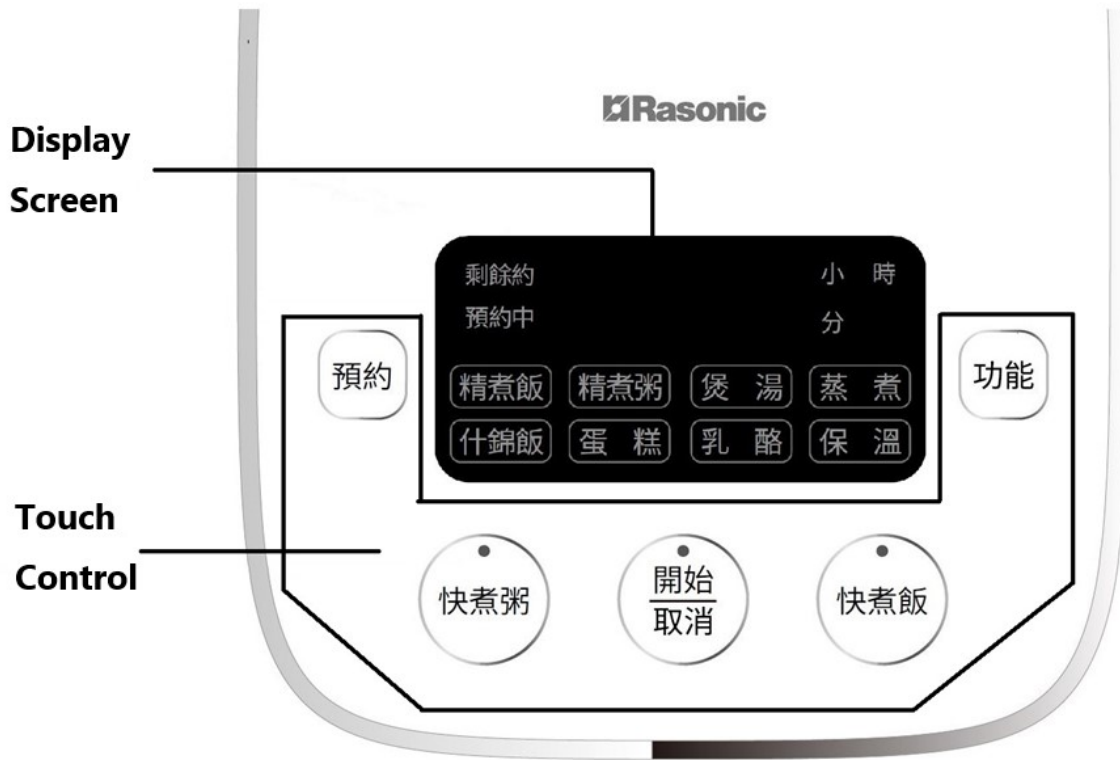

## Inner pot water level marking



(Above diagram is for reference only, subject to actual product.)


## 5. Operation Instructions

### 5.1 Basic Operation


1. Press lid open button to open the lid.
2. According to your decided function, determine the rice you need. Using the original measuring cup correctly which maximum is 180 ml. Refer to the below pictures to measure:



3. Do not wash rice directly inside the inner pot to avoid scratching the coating.
4. Put the rinsed rice in the inner pot. According to your selecting function, refer to the inner pot water level, input water equally the water level. It is allowed to adjust the water amount to fit your preference.
5. Put the inner pot inside the main body and close the lid until a click sound.
6. Before putting the inner pot inside the main body, make sure the outer and bottom surface of the inner pot is wiped dry and clean. If foreign substance is attached, remove it immediately. Otherwise it will cause noise while cooking and possibly a malfunction.
7. Be sure that the handle of inner pot is fit properly into the gap for handle at the main body.

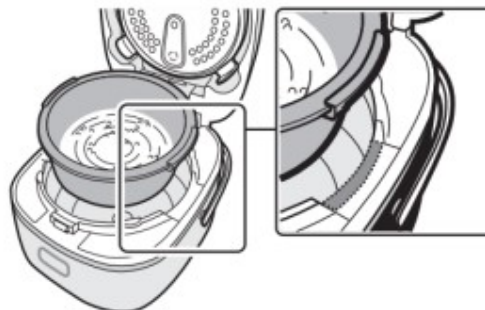

8. Check the steam valve set and inner lid have been attached.

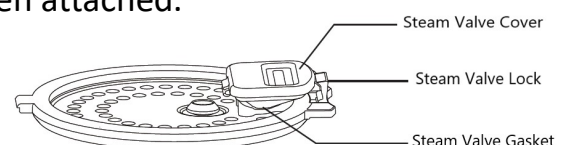

## 5.2 Operation

Put all ingredients into the inner pot, according to given water level marking to add water and close the lid. Then, select function by touch control:

1. Connect to the electricity, press **【Function】** button (功能) to select function, for example, Refined Rice (精煮飯), Refined Congee (精煮粥), Soup (煲湯), Steam (蒸煮), Mixed Rice (什錦飯), Cake (蛋糕), Yogurt (乳酪), Keep Warm (保溫) or directly press Quick Cook (快煮飯) and Quick Congee (快煮粥) to select function. Display screen will show the corresponding cooking time after pressed the function button.
2. Once you press **【Function】** button (功能), a 'beep' sound will be alarmed. The indicator of selected function will light up and **【Start/ Cancel】** indicator (開始/取消) will flash. If no action is taken around 60 seconds, appliance will return a standby status followed a 'DiDi' sound, selected function will not start.
3. Press **【Start/ Cancel】** button (開始/取消), the appliance will have a beep sound and selected function will keep lighting up. Appliance start to cook. At the same time, display screen will show the remaining cooking time.
4. If you want to suspend the operation, press **【Start/ Cancel】** button (開始/取消) for 3 seconds, operation will stop and return to standby status.
5. There are 4 'beep' when appliance finishes cooking. Indicator of **【Start/ Cancel】** button (開始/取消) light up and enter to keep warm mode automatically. The keep warm time will be showed on display screen.

**CAUTION!** Do not keep warm over 12 hours, otherwise it may have crust, bad smell or deterioration.

6. Press **【Start/ Cancel】** button (開始/取消) to cancel keep warm mode, appliance returns to standby status and you can turn it off now.

**CAUTION!** It is suggested to use Refined Rice or Refined Congee function when cooking leftover rice, sticky rice or with other ingredients.

### 5.3 Preset Mode

Preset mode only available to Refined Rice, Refined Congee, Soup, Steam and Mixed Rice function. It can set the cooking completion time of the appliance within 24 hours, the display screen showed is the finish cooking time.

**CAUTION!** Be aware of perishable food if set the preset function over a long time.

1. Press **【Function】** button (功能) to select desired function.

**CAUTION!** Some function is not supported by preset mode that cannot move on to next step.

2. Press **【Preset】** button (預約) to enter preset mode, 4 hours presetting is assumed. the Display screen and preset indicator light will flash, you can press **【Preset】** button (預約) to adjust reservation time. Single press for 10 minutes' increment, press and hold for 30 minutes' increment.
3. After adjustment, press **【Start/ Cancel】** button (開始/取消) to confirm presetting.
4. If preset is need to be cancelled, press **【Start/ Cancel】** button (開始/取消) for 3 seconds to cancel the reservation.
5. If you want to change the reservation time or cooking function, you have to cancel the original reservation and reset.

## 5.4 Steam Function (蒸煮)

1. Fill water into inner pot. **CAUTION!** Do not exceed maximum water level marking, then put the steaming basket and food inside the inner pot.
2. Press 【Function】 button (功能) to choose Steam, press 【Start/ Cancel】 button (開始/取消) and then press 【Function】 button (功能) to adjust the steaming time. Single press for 1 minutes' increment, press and hold for 5 minutes' increment.
3. If you see Steam function is flashing and 【Start/ Cancel】 indicator (開始/取消) is flashing red light, it means appliance enters Steam function.
4. Appliance would keep operating if you open the lid during functioning.
5. If the electricity is suspended and resumed afterward, the operation will resume to the last setting.

**CAUTION!** Steaming time starts counting from the time water is boiled, so actual operation time would longer than setting time.

## 5.5 Reminders for Cake Function (蛋糕)

Mixture of egg, flour and water exacter **should NOT** exceed the water level marking of 1.5 cup of RICE (白米), otherwise the cake may block the steam lid when cooking that lid explosion can be caused.

## 5.6 Operation Time Reference Table

The cooking amount and time of each function are as follow:

Function	Max. amount of cooking(Rice/ Water level marking)	Cooking time (Approx.)	Adjustable time range	Keep Warm (Approx.)
Refined Rice	1-3.5 Cups/Rice (白米)	55 mins	N/A	12hours
Quick Cook	1-3.5 Cups/Rice (白米)	28 mins	N/A	12hours
Mixed Rice	1-2 Cups/Mixed Rice (什錦)	1 hour 50 mins	N/A	12hours
Soup	MAX soup level (湯最大水位)	1 hour 30 mins	N/A	12hours
Refined Congee	0.5-1 Cup/Congee (粥) 0.5 Cup/Gruel (稀粥)	1 hour 30 mins	N/A	12hours
Quick Congee	0.5-1 Cup/Congee (粥) 0.5 Cup/Gruel (稀粥)	30 mins	N/A	12hours
Steam	MAX water level (蒸最高水位)	20 mins	1-30 mins	12hours
Keep Warm	--	--	--	12hours
Yogurt	--	8 hous	--	--
Cake	Mixture <b>should NOT</b> exceed 1.5 Cups/白米	40 mins	--	--

### CAUTION:

1. The actual rice cooking time is varied with different rice quantity, water amount, voltage, room temperature, water temperature and rice quality.
2. The rice texture is affected by different rice quantity, water amount and rice quality which are even possible to form crust.

3. According to personal preference on the rice texture, water amount can be adjusted.
4. Depends on the characteristics of various ingredients, it is recommended that the reservation time should not be too long, otherwise the food may deteriorate.
5. Refined Rice and Quick Cook cannot make soup or congee, user have to choose suitable function for cooking.

## **5.7 Keep Warm (保溫)**

1. Keep warm operation: Automatically turn into keep warm mode after cooked. Or press **【Function】** button (功能) to select keep warm mode and press **【Start/ Cancel】** button (開始/取消) button to start. Keep warm mode is functioning if its indicator light up and **【Start/ Cancel】** indicator (開始/取消) flash in red light.
2. During keep warm, scarify the rice occasionally and close the lid. It is to avoid the rice becomes dry and clamp.
3. The maximum keep-warm time is 12 hours, afterwards the rice cooker will then return to standby status automatically.
4. Do not keep warm the rice or food for too long, otherwise it may have crust, bad smell or deterioration.
5. Under keep warm mode, press **【開始/取消】** button to leave the keep warm mode.
6. If the appliance is removed from the power and returned it afterward, the rice cooker will resume to the last setting.



**CAUTION!** Yogurt function is not available to keep warm, appliance returns to standby mode after finish cooking.

## 6. Troubleshooting

Problem	Cause	Solution
The indicator is not on	The power cord plug is not plugged in properly	Reinsert the power cord plug into place
	The power cord plug or spare parts are damaged	Contact <b>Shun Hing Electric Service Centre Ltd.</b> for Checking and repairing.
Rice and porridge are not cooked properly, burnt bottom when cooking rice or porridge	Proportion of rice and water is not balance	Adjust the amount of water added
	The bottom of the inner pot is dirty or has foreign matter	Clean with damp cloth
	The lid is not tightly closed	Close the lid tightly
	Malfunction	Contact <b>Shun Hing Electric Service Centre Ltd.</b> for Checking and repairing.
Overflow when cooking rice or porridge	Adding too much water and rice	Avoid going above the maximum water level of select function, more details can be found in table 5.6.
Function failure	Power supply is disturbed	Unplug the power cord for 20 seconds and restart. If there is still function failure, contact <b>Shun Hing Electric Service Centre Ltd.</b> for Checking and repairing.
Display screen shows F1, F2, F3, F4, C2, C7, C8	Appliance malfunction	Contact <b>Shun Hing Electric Service Centre Ltd.</b> for Checking and repairing.

## **7. Special Avowal**

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and color are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

## **8. After Sales Service**

Shun Hing Electric Works & Engineering Co., Ltd. (“The Company”) authorizes Shun Hing Electric Service Centre Ltd. (“SHESC”) to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.





SHUN HING GROUP  
信興集團  
SINCE 1953

**Rasonic 樂信牌**

信興電工工程有限公司

**SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.**

辦公室：香港九龍尖沙咀東部麼地道 67 號半島中心 9 樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.hk>

電郵：[shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, Hong Kong

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.hk>

E-mail: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

**保養及維修 Maintenance and Repair Service:**

信興電器服務中心有限公司

**SHUN HING ELECTRIC SERVICE CENTRE LTD.**

香港新界葵涌勝耀街 2 號信興中心 11 樓

電話：2406 5666

圖文傳真：2408 0316

網址：<https://www.shunhing-service.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK

Tel: 2406 5666

Fax: 2408 0316

Website: <https://www.shunhing-service.com/en>

客戶服務中心：

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

香港天后琉璃街7號柏景中心22樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F., Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong

Avenida de Venceslau de Morais, No. 193-199, 5 andar - I, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：

<https://www.shunhing-service.com/zh>

For the latest information of Hong Kong and Macau service center, please visit:

<https://www.shunhing-service.com/en>

RRC-T0125