



RHC-T307W

IH Rice Cooker

IH 磁應電飯煲



僅供家庭使用

For household use only

使用說明書

OPERATION MANUAL

- 在使用本產品前，應仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。
Read the operation manual carefully before using. Keep it in a safe place for future reference.
- 本說明書中的圖示可能與實物有不同的地方，僅供參考。
Some figures in the manual may not match with the real object, just for reference only.

非常感謝您選購樂信牌 IH 磁應電飯煲，使用前應先詳細閱讀本說明書，並保存以備日後參考。

目錄

1. 安全注意事項
2. 清潔及儲存
3. 產品規格
4. 產品說明
5. 使用方法
6. 故障排除
7. 特別聲明
8. 售後服務

1. 安全注意事項

使用本產品時，必須遵守下列安全措施：

1. 切勿讓小孩單獨使用、清潔及維修保養電飯煲或把其當作玩具。將電飯煲及其電源線放於小孩不能觸及的地方。
2. 切勿讓電飯煲在無人看管下運作，以及沒有裝載內鍋或未放入食物的情況下操作本產品。
3. 為避免燙傷，使用時或剛使用後，切勿將臉或手靠近頂蓋或蒸氣口；切勿觸摸剛使用後的發熱盤及內鍋，因仍有餘熱。
4. 切勿把機身、電源線或連接器插頭浸入水中；或被水濺濕，以免造成觸電及火災。
5. 為免危險，須按照此說明書建議方法使用，切勿在室外使用或作其他用途。如錯誤操作，可造成傷害。
6. 使用前，確保電源線兩端的插頭已分別插穩在電飯煲及電源插座上。
7. 僅可使用220V的交流電源。應單獨使用額定電流10A以上的插座。
8. 如運作時電源線和插頭有部份發熱、漏電、斷電或插頭鬆動，都不可使用，以免造成觸電及火災。
9. 請勿讓兒童單獨使用，而且不可讓嬰兒接觸此產品。否則可能引起觸電、燙傷或受傷。
10. 手濕時切勿接觸、插入或拔除插頭，否則可構成觸電的危險。
11. 本產品只可作家庭或類似環境使用，如商店內部、辦事處和其他工作環境的員工廚房區域；農舍；在酒店、汽車旅館以及其他居住環境中供客人使用；在提供住宿及早餐的類型環境中使用。
12. 切勿使用有殘缺或鬆動的插座。使用前，確保插頭已充分擦乾。
13. 切勿擅自改裝電飯煲或使用非生產商提供的零件進行修理，否則可造成危險及維修保養無效。
14. 此電飯煲可供年齡在 8 歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用電飯煲和理解所涉及的危險。
15. 使用時，切勿用任何物件覆蓋電飯煲表面或遮擋蒸氣口，以免造成電飯煲故障、變形或變色。
16. 經常檢查電飯煲、內鍋、電源線及插頭，如有損壞，為避免危險，應立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。
17. 切勿使用其他器皿來取代原裝內鍋。
18. 使用前，確定內鍋外部及發熱盤表面清潔乾爽，否則可能引致故障。
19. 切勿用明火加熱或空燒內鍋，否則會損壞內鍋。
20. 使用時，切勿打開頂蓋、移動或搖晃電飯煲，以免造成危險。
21. 煮食份量不可超過內鍋內最高水位線，否則可能有水從蒸氣口噴出。
22. 切勿使用內鍋直接洗米，以免損害內鍋表面的塗層，影響烹調效果。

23. 切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面，否則會損壞電源線。
24. 使用後，須從電源插座拔出插頭及待電飯煲冷卻後才移動、清潔或檢查電飯煲。
25. 使用時，切勿打開上蓋、移動或搖晃電飯煲，以免造成危險。
26. 切勿用內鍋烹調酸性或鹼性的食物，以免損壞內鍋塗層。
27. 在插入或拔除插頭時，應用手握穩插頭本身，不要抓住電源線。
28. 切勿在以下環境使用電飯煲：
 - 潮濕或近水的環境；
 - 被陽光直接照射或靠近熱源或高溫的環境如焗爐附近；
 - 在不平穩的表面上；
 - 易燃物料或不耐熱物品附近（如枱布、窗簾及毛巾等）；
 - 靠近帶磁石物件；
 - 導磁物品上。
29. 不可在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。
30. 產品在運作時或完成運作後，切勿直接觸碰內鍋，以防止燙傷。
31. 依照使用說明放入適量的米和水並正確選擇相應功能。以免米水溢出、半生不熟、焦米、煮干、燒焦等現象，嚴重時將會影響內鍋的使用壽命。
32. 插入電源線時，必須插到底，以確保接觸良好。
33. 應時常保持電源線插頭和插座的乾爽，禁止用濕手插拔電源線插頭。
34. 在產品工作過程中長按「開始/取消」鍵約3秒將返回待機狀態，此時再重新啟動功能，內鍋中的食物可能因多次加熱而導致燒焦或出現其他異常現象，在日常使用中避免此類操作。
35. 加熱開水煮飯/煮粥並不能縮短煮食時間，只會使飯粒夾生或煮更爛，須注意使用。
36. 首次使用產品時，可能有輕微異味，顯示屏在剛通電時，可能顯示閃爍，請拔下插頭重新通電。以上兩種情況屬正常現象，可放心使用。
37. 使用前，確定內鍋外部及產品內部表面清潔乾爽，否則可能引致故障。
38. 確保頂蓋蓋緊，避免因密封不良而影響煮食效果，同時避免發生故障及其他事故。
39. 取出內鍋前，務必先將電源線插頭拔掉。
40. 切勿注水於發熱盤，使用前留意內鍋外側(尤其是底部)和電飯煲內側(尤其是發熱盤)確保表面無水珠或其他雜物，並確保內鍋與發熱盤接觸良好。

2. 清潔及儲存


1. 清潔前，必須拔除電源插頭，並待電飯煲完全冷卻。
2. 清洗內鍋和內蓋時，應使用海綿等軟性物料及清潔劑，用水沖洗後再抹乾及裝回原位。
 - 如有食物黏在內鍋，清洗前可先用水浸泡一會。
 - 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)清潔。



3. 如發熱盤、機身或上蓋有污穢，可用濕布抹淨後再抹乾。
4. 為免損壞內鍋塗層，盛飯時須使用原裝飯勺，切勿使用金屬餐具或在內鍋中切割食物。
5. 長時間使用後，內鍋表面可能會變色，此乃正常現象並不會影響食物安全及內鍋的使用。
6. 儲存時，將電飯煲放入紙箱並放置在乾爽的環境中。
7. 儲存時，切勿將電源線纏繞在電飯煲四周或壓住電源線，以免造成電源線損壞。
8. 使用產品後應及時清洗，防止一些污垢緊緊地附著在產品或配件表面難以去除。
9. 切勿將產品主機浸水或用水淋洗，可用柔軟的濕布擦拭。
10. 內鍋適宜用乾淨軟布或毛巾擦拭、清洗過程中請勿使用硬質鋼絲擦拭。
11. 如長時間不使用產品，在清潔擦拭後，可裝入包裝箱中，存放於通風乾燥的地方，以免受潮，影響使用。


內蓋的拆卸及安裝

內蓋的拆卸

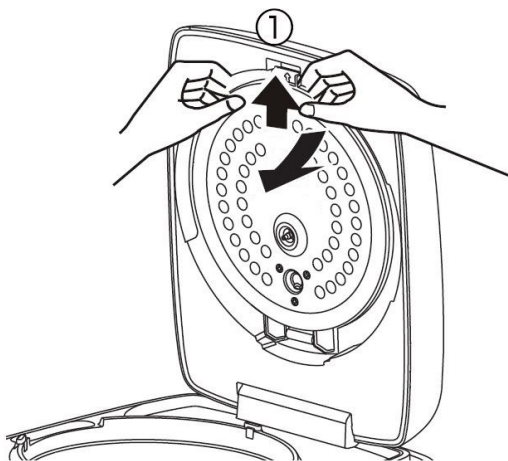


1. 內蓋扣向上按壓，內蓋即可取下。

內蓋的安裝

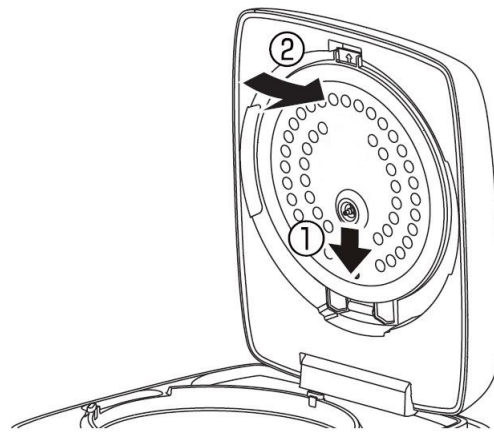

1. 內蓋向下對准卡位。
2. 然後按壓內蓋，裝好內蓋。

蒸氣閥組件的清潔

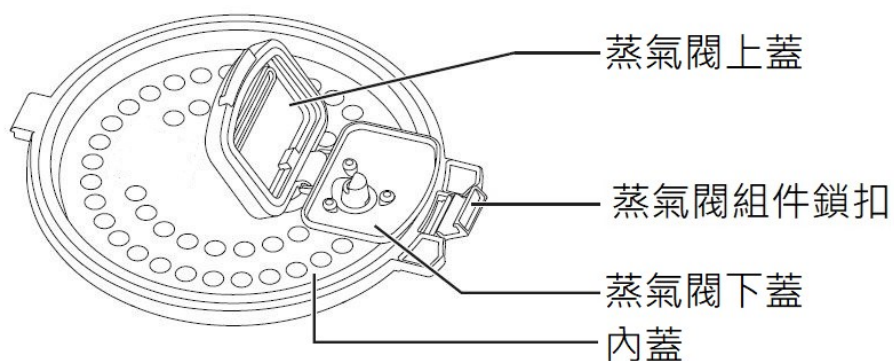




解開蒸氣閥組件鎖扣，打開蒸氣閥上蓋，可將方形密封膠圈拉出清潔。
待清潔完畢後合上蒸氣閥，再鎖上鎖扣。

3. 產品規格

| | |
|---------------------|----------------------|
| 型號 | RHC-T307W |
| 顏色 | 白色 |
| 額定電壓 | 220-240 伏特~ 50-60 赫茲 |
| 額定功率 | 800 瓦 |
| 容量(約) | 0.7 升 |
| 煮米量(約) | 白米最多 3.5 杯 |
| 淨重(約) | 3.5 公斤 |
| 產品尺寸 (闊 x 深 x 高)(約) | 238 x 291 x 197 毫米 |



4.1 產品說明

1. 內蓋
2. 內蓋密封圈
3. 主機手柄
4. 主機
5. 內鍋把手
6. 內鍋
7. 蒸氣口
8. 控制面板及顯示屏
9. 頂蓋
10. 開蓋按鈕
11. 電源線

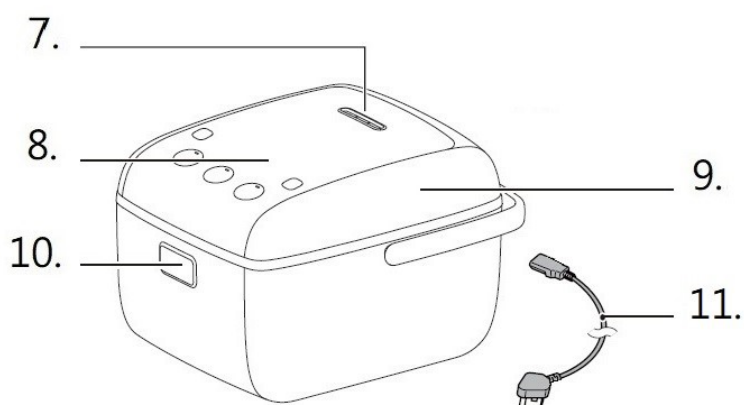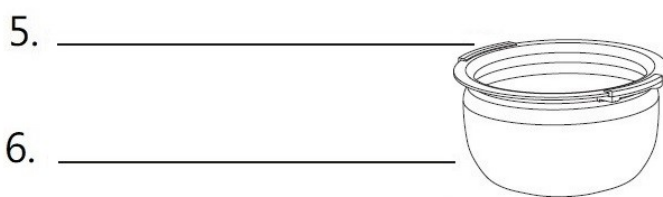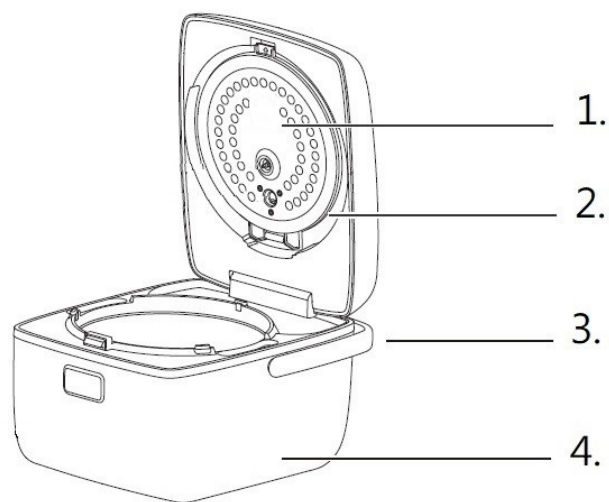


產品配件

12. 量杯
13. 飯勺
14. 湯勺
15. 蒸籠

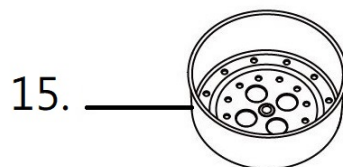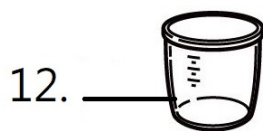

(以上產品圖片僅供參考，以實物為準)

4.2 輕觸式控制面板

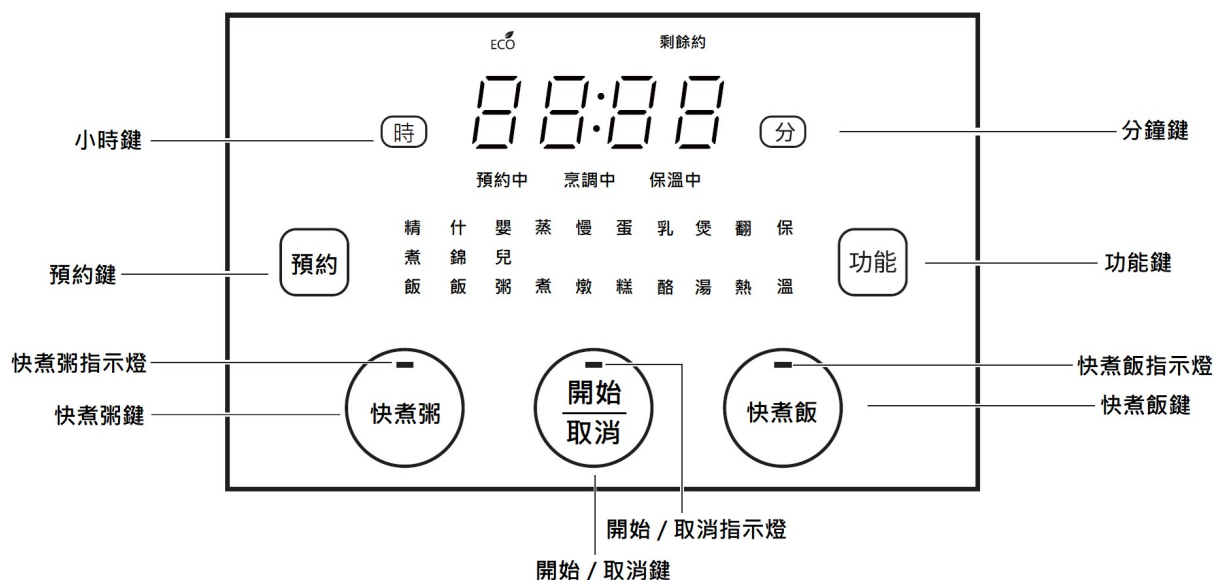

4.3 顯示屏



(以上圖片僅供參考，以實物為準)


5. 使用方法

5.1 使用步驟



1. 輕按開蓋按鈕，打開電飯煲頂蓋。
2. 使用本產品所附量杯正確量米，根據需要的飯量和功能決定用米的量，並用附帶的量杯正確量米。裝滿一杯米大約為 180 毫升。請按下圖正確量米：



3. 切勿直接使用產品內鍋洗米，應將量好的米倒入其他器皿中清洗後，再倒進產品內鍋
4. 將鍋內的米鋪平，根據功能及放入米的杯數確定加水量。亦可根據個人口味進行調節。根據下方水尺標示調節加水量：

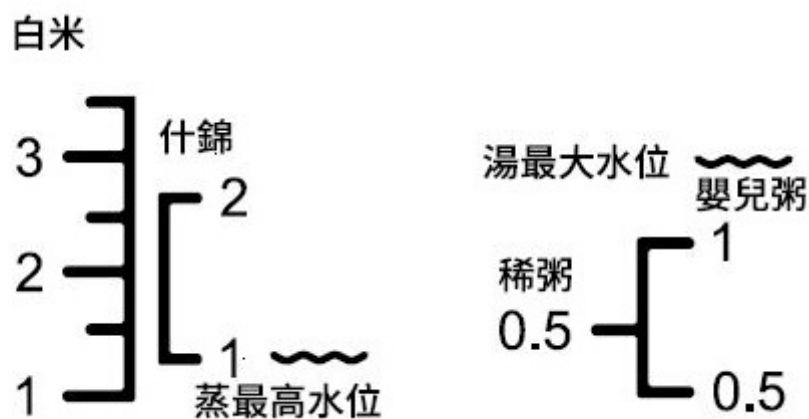

5. 內鍋放入主機前，請把內鍋外側、內蓋及內鍋底部上附著的水滴及異物擦拭乾淨。
6. 內鍋放入主機後，輕輕轉動數下，確保內鍋已安裝到位。

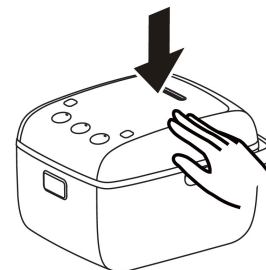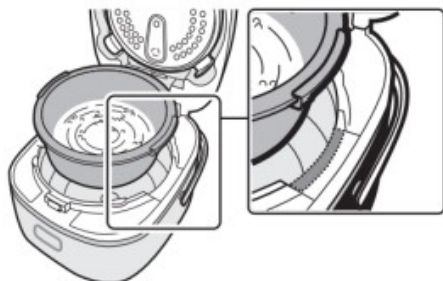

7. 確認內蓋與蒸氣閥組件已經裝好，若內蓋沒有確實裝好，頂蓋將無法關上。
8. 關上頂蓋，直至聽到“嗒”的一聲。

5.2 烹飪方法

將食材放入內鍋中，並根據水位刻度指示加入適量的水。然後關閉頂蓋。

1. 接通電源後，按「功能」鍵選擇烹飪功能，可選擇精煮飯、什錦飯、嬰兒粥、蒸煮、慢燉、蛋糕、乳酪、煲湯、翻熱及保溫。選擇其中一個功能，對應的烹飪時間會於顯示屏上顯示。



2. 按「快煮粥」、「快煮飯」鍵後，產品會直接進入相應的烹調功能，對應功能指示燈和“開始/取消”功能指示燈長亮
3. 每次按動「功能」鍵，都會聽到「嗶」的一聲，功能的指示燈會閃動。此狀態下若持續無操作約 20 秒，產品會返回待機狀態，顯示屏顯示「:」並閃動。
4. 通電後默認狀態為精煮飯功能，此時直接按「開始/取消」鍵就會啟動精煮飯功能，蜂鳴器發出「嗶」的一聲，功能指示燈長亮並且顯示為烹調中。
5. 在烹飪過程中，如果要中斷烹飪，可長按「開始/取消」鍵約 3 秒，烹飪功能將會取消，產品會返回待機狀態，顯示屏顯示「:」並閃動。
6. 烹飪結束時，蜂鳴器長鳴 5 次，「開始/取消」指示燈長亮，產品會進入保溫模式。保溫功能指示燈長亮，並顯示已保溫時間，保溫時間會以小時遞增。

注意事項:

1. 當使用舊米、糯米等特殊米種時，或須加入其它材料或調味一起烹煮時，建議選擇精煮功能。
2. **注意!** 建議不要將食物保溫時間超過 12 小時。(可能會導致食物烤焦發黃或發出異味)
3. 如產品在烹飪途中拔掉電源，烹飪功能將會在回復電源後維持，如需提早取消相應功能，按「開始/取消」鍵約 3 秒返回待機狀態，然後拔掉電源。

5.3 功能默認時間表

各功能的烹調容量及時間如下圖示：

| 烹調功能 | 烹調最多份量 (米量 / 水尺) | 預設烹調時間 (約) | 可調節時間範圍 | 保溫功能 |
|------|---------------------|---------------|-------------|----------|
| 精煮飯 | 1 - 3.5 杯 / 白米 | 55 分鐘 | 不適用 | 最多 12 小時 |
| 快煮飯 | 1 - 3.5 杯 / 白米 | 28 分鐘 | 不適用 | 最多 12 小時 |
| 什錦飯 | 1 - 2 杯 / 什錦米 | 90 - 120 分鐘 | 不適用 | 最多 12 小時 |
| 嬰兒粥 | 0.5 - 1 杯米 / 稀粥/嬰兒粥 | 90 分鐘 | 60 - 120 分鐘 | 最多 12 小時 |
| 快煮粥 | 0.5 - 1 杯米 / 稀粥/嬰兒粥 | 40 分鐘 | 不適用 | 最多 12 小時 |
| 蒸煮 | 蒸最高水位 | 20 分鐘 | 1 - 60 分鐘 | 最多 12 小時 |
| 慢燉 | 不適用 | 8 小時 | 1-12 小時 | 不適用 |
| 蛋糕 | 混合物不要超過白米 1.5 杯 | 45 分鐘 | 45 - 60 分鐘 | 不適用 |
| 乳酪 | 不適用 | 8 小時 | 8 - 12 小時 | 不適用 |
| 煲湯 | 湯最大水位 | 90 分鐘 | 60 - 120 分鐘 | 最多 12 小時 |
| 翻熱 | 不適用 | 25 分鐘 | 25 - 60 分鐘 | 不適用 |
| 保溫 | 不適用 | 不適用 | 不適用 | 不適用 |

注意:

1. 功能的實際時間會根據米量、水量、電壓、室溫、水溫及米質的不同而變化。
2. 米飯的軟硬會因米量、水量及米質的不同而影響，並有可能形成鍋巴。
3. 用戶可按個人喜好適量地調節水量。
4. 根據各種食材的特性，設定合適的預約時間。預約時間不宜過長，否則可能導致食材變質。
5. 若進行長時間預約烹飪，請注意食材保質時間。
6. 煮飯功能不可用作於煲湯、煮粥等，用戶必須選擇對應的功能進行烹飪。

5.4 蒸煮功能的使用

1. 使用蒸煮功能時，只需在內鍋注入適量的水，將食物放在蒸架上。
2. 按「功能」鍵選擇蒸煮功能，按「分鐘」鍵調較時間，短按為 1 分鐘遞增，長按為 5 分鐘遞增。設定時間並不包括預熱時間，因此實際運行時間會較設定時間為長。
3. 按「開始/取消」鍵確認功能，烹調中指示燈轉為長亮，烹調開始。

注意！ 蒸煮功能下顯示的時間為水沸騰後的剩餘烹調時間。-

5.5 蛋糕功能的注意事項

注意！ 雞蛋、面粉、水等的混合物不得超過白米刻度 1.5 杯的位置，否則蛋糕在烘烤過程中會膨脹並容易堵住出氣口，有可能引起本產品頂蓋爆開的危險。

5.6 預約功能

此功能只適用於精煮飯、什錦飯、嬰兒粥、蒸煮及煲湯功能。預約功能可支援 24 小時的預約。預約功能顯示的時間為烹飪完成的時間。

1. 先按「功能」鍵選擇預約。
2. 按「預約」鍵進入預約功能，預約時間默認為 2 小時。

注意！ 部分功能無法預約，則無法進行下一步操作。



3. 按「小時」及「分鐘」鍵來調整時間。

長按「小時」或「分鐘」鍵會使時間快速遞增。



4. 完成調整預約後，按「開始/取消」鍵確認預約。「預約中」指示燈會亮起。

如需取消預約設定，長按 3 秒「開始/取消」鍵取消預約設定。

如需更改預約時間或功能設定，請先取消預約然後再重新設定預約功能。

5.7 保溫功能

1. 先按「功能」鍵選擇保溫功能，然後按「開始/取消」鍵確認功能。
2. 確認保溫功能後，保溫中指示燈會亮起及顯示窗會顯示累計保溫時間，以小時遞增。
3. 保溫時，偶爾將米飯翻鬆及關上頂蓋，以免米飯變乾及結塊。
4. 保溫最長為 12 小時，之後產品會自動返回待機狀態。
5. 切勿將米飯或食物過長保溫時間，否則會產生鍋巴、異味或食物變質。
6. 如在保溫途中拔掉電源，保溫功能將會在回復電源後維持。如須取消保溫功能，可在保溫狀態下按「開始/取消」鍵約 3 秒，然後拔掉電源。
7. 乳酪功能無保溫功能，乳酪功能完成後直接返回待機狀態。
8. 保溫功能在完成後直接返回待機狀態。

6. 故障排除

| 故障現象 | 成因 | 排除方法 |
|--|--------------|--|
| 顯示屏不著 | 電源線插頭沒有插好 | 將電源線插頭重新插入到位 |
| | 電源線插頭或內部零件損壞 | 請聯絡 信興電器服務中心有限公司 進行檢查及維修 |
| 煮飯、煮粥底部燒焦 或煮不熟 | 加水量太少 | 調整加水量 |
| | 內鍋底部污穢或有異物 | 用濕布清潔乾淨 |
| | 頂蓋未蓋緊 | 將頂蓋蓋緊 |
| | 產品故障 | 請聯絡 信興電器服務中心有限公司 進行檢查及維修 |
| 煮飯、煮粥時溢出 | 加水加米量太多 | 避免高於功能的最高水位刻度線，詳情可參考“ 章節 5.3 功能默認時間表 ” |
| 功能失靈 | 電源被干擾 | 拔除電源線插頭 20 秒後，再重新通電，如情況持續請聯絡 信興電器服務中心有限公司 進行檢查及維修 |
| 顯示屏出現 F1, F2, F3, F4, F5, F6, F7, C5, C6, C8, U1 | 產品故障 | 請聯絡 信興電器服務中心有限公司 進行檢查及維修 |

7. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電**信興電工工程有限公司**：2861 2767。

8. 售後服務

1. 信興電工工程有限公司(“本公司”)授權**信興電器服務中心有限公司**(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。(“服務中心”)保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

Thank you for choosing Rasonic IH Rice Cooker. Read the manual carefully before using and well keep it for future reference.

Table of Contents

1. Important Safeguards
2. Cleaning and Storage
3. Product Specifications
4. Product Description
5. Operation Instructions
6. Troubleshooting
7. Special Avowal
8. After Sales Service

1. Important Safeguards

When using the appliance, follow the below safety precautions:

1. Never allow children to operate, clean, perform maintenance on the appliance alone or play as toy. Put the appliance and its power cord in a place not reachable by children.
2. Never leave the appliance unattended when in use, don't or operate without inner pot or food inside.
3. To avoid burns, do not get your face or hands close to the lid or steam outlet during use or right after use; never touch the heating plate and inner pot which are subject to residual heat right after use.
4. Never immerse the main body, power cord or adaptor plug in water or let them wet, it can cause electric shock or fire.
5. To avoid danger, use the appliance according to the operation manual. Do not use it outdoors or other purpose. Misuse can cause injury.
6. Before use, make sure both ends of the power cord are plugged in tightly on the appliance and the power socket.
7. Only for 220V AC power supply use. A socket with a rated current of 10A or more should be used alone.
8. If the power cord and plug are partially overheated, have leakage, are out of power, or are loose during operation, do not use them to avoid electric shock or fire.
9. Do not let children use it alone and let babies come into contact with the product. Otherwise it may cause electric shock, burns or injuries.
10. Do not touch, insert or unplug the plug with wet hands, otherwise it may cause the risk of electric shock.

11. The appliance is intended to be used in household or similar applications such as staff kitchen in shops, offices and other working environments; farm houses; by clients in hotels; motels; other residential type environments; bed and breakfast type environments
12. Do not use deficient or loosen socket. Make sure the plug is dry before use.
13. Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and warranty will become invalid.
14. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
15. When in use, do not cover the appliance surface or steam vent with any objects to avoid appliance malfunction, deformation or discoloration.
16. Always check the condition of rice cooker, inner pot, power cord and plug. To avoid hazard, stop using the appliance immediately and contact **Shun Hing Electric Service Centre Limited** for checking and repairing if any of the parts is damaged.
17. Do not use other container to substitute the original inner pot.
18. Make sure the ceramic inner pot outer surface and heating plate are clean and dry before use, otherwise it may cause malfunction.
19. Do not heat the inner pot with an open flame or empty the inner pot, otherwise the inner pot will be damaged.
20. Do not open the lid during cooking, move or shake the rice cooker to avoid danger.
21. The cooking amount cannot exceed the maximum water level of the inner pot to prevent water from spilling from the steam vent.
22. Do not wash rice directly inside the inner pot to avoid scratching the coating and affect the cooking results.

23. Do not operate the appliance when the power cord is tangle or hang the power cord over the edge of table, counter-top or let it touch any hot surface, it may cause power cord damage.
24. After use, please remove the plug and let the appliance cool down before moving, cleaning or checking.
25. Do not open the lid, move or shake the appliance when in use, it can cause danger.
26. Do not cook acidic or alkaline food in the inner pot to avoid damage on the inner pot coating.
27. Grasp the plug itself when plug in or unplug the appliance, do not grasp the power cord.
28. Do not operate the appliance in the following places:
 - Humid environment or near water
 - Near heat sources such as electric oven, induction cooker and fire
 - Unstable surface
 - Near inflammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.)
29. Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord.
30. Do not directly touch the inner pot while the appliance is cooking or after use to prevent burns.
31. Please put in correct amount of rice and water and select functions correctly according to the operating instructions. So as to avoid overflow of rice water, half-cooked rice, scorched rice, boil-dry, burnt, etc. In serious cases, it will affect the service life of the inner pot.
32. Insert the power plug and instrument plug firmly.
33. Do not touch the appliance, plug or unplug the power coed by wet hand.

34. If the product presses the 「開始/取消」 key 3 second during operation, it will return to the standby state. At this time, the function will be restarted. The food in the inner pot may be burned or have other abnormal phenomena due to repeated heating. Please Avoid such operations during use.
35. Do not cook with hot water, it will affect the thermostat operation and the rice texture.
36. When the product is used for the first time, there may be a slight smell. The display may flash when the power is first turned on. Please unplug the product and power it on again. The above two situations are normal, please feel free to use them.
37. Make sure the inner pot outer surface and heating plate are clean and dry before use, otherwise it may cause malfunction.
38. Ensure close the lid, avoid open lid to affect rice texture and to avoid malfunctions and other accidents.
39. Before taking out the inner pot, be sure to unplug the power cord.
40. Do not pour water into the heating plate. Before use, pay attention to the outside of the inner pot (especially the bottom) and the inside of the rice cooker (especially the heating plate) to ensure that there are no water beads or other debris on the surface, and make sure that the inner pot is in good contact with the heating plate.

2. Cleaning and Storage


1. Before cleaning, unplug and let the rice cooker cool down completely.
2. When clean the inner pot and lid, please use soft material such as sponge and mild detergent. Rinse with water and rub them dry. Put them in place after cleaned.
 - If food residual sticks on the inner pot, please soak the inner pot with water for a while before cleaning.
 - Never use poisonous or corrosive detergent or harsh tools (e.g. metal-wired brush) for cleaning.




3. If dirt is attached on the heating plate, main body or lid, use a damp cloth to clean and wipe them dry.
4. To avoid damage on the inner pot coating, please use original rice scoop when serving rice, never use metal utensils or cut food in the inner pot.
5. The color of inner pot may change after using a period of time, however it does not affect the food hygiene and function of the inner pot.
6. When store, put the appliance in a box and store in a dry place.
7. When store, never wrap the power cord around the appliance or clip the power cord to prevent power cord damage.
8. Clean the product in time after use to prevent some dirt from tightly adhering to the surface of the product or accessories and making it difficult to remove.
9. Do not rinse or immerse the main unit in any liquid. Clean it with a soft damp cloth.
10. The inner pot should be clean with a soft cloth or towel. Do not use hard steel wire to wipe it during cleaning.

11. When the product is not used for a long time, please clean it and wipe it before putting it into the packaging box. It should be stored in a ventilated and dry place to avoid moisture and affecting its use.

Detach and install the inner lid

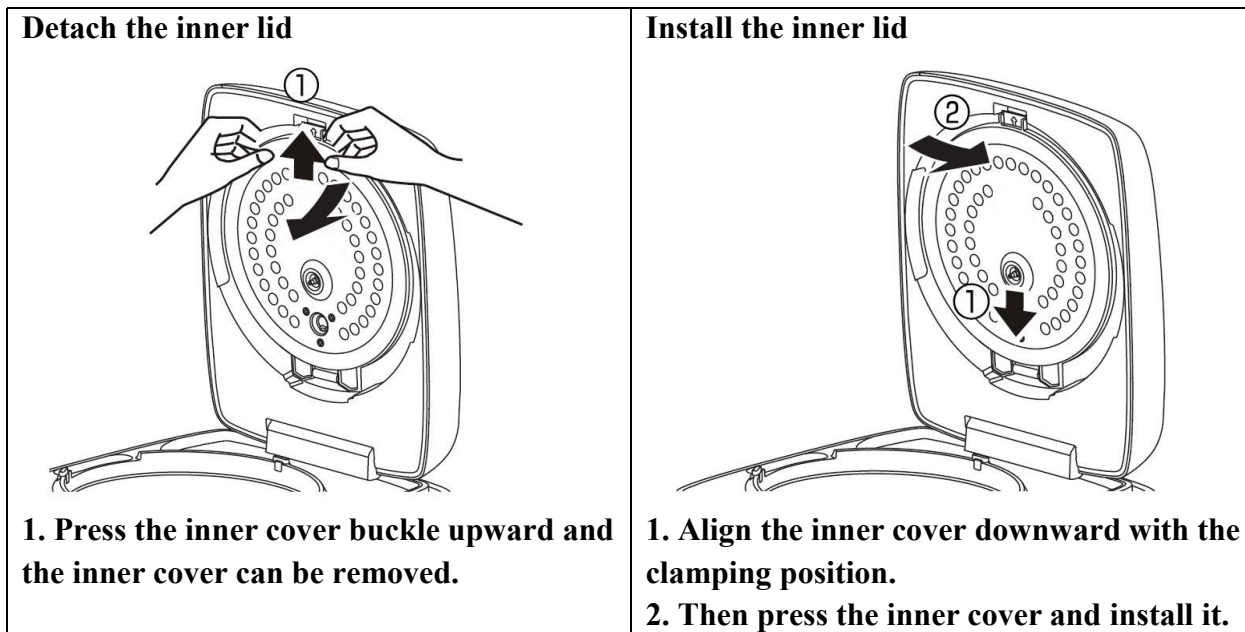

Cleaning of Steam Valve Assembly

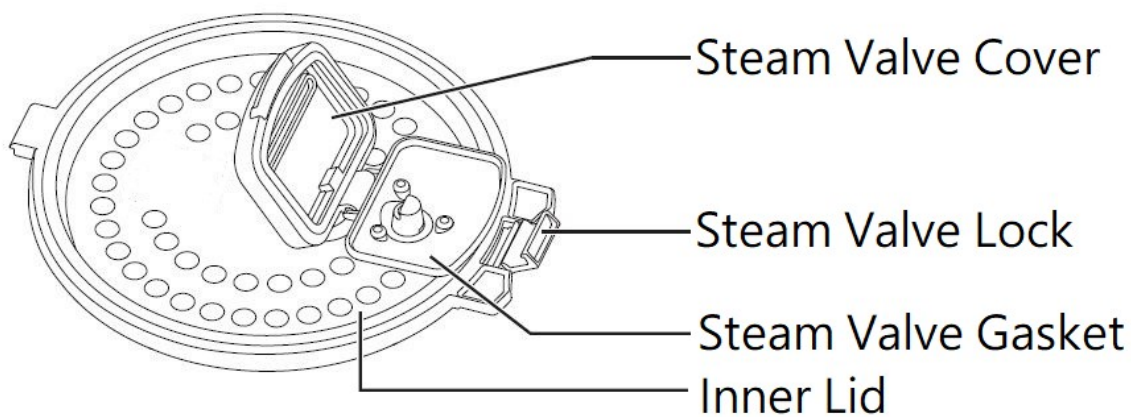

Unlock the steam valve lock, open the steam valve cover, and pull out the square sealing ring for cleaning.




After cleaning is completed, close the steam valve and lock it.

3. Product Specification

| | |
|------------------------------------|-------------------------------|
| Model | RHC-T307W |
| Color | White |
| Rated Voltage | 220 - 240V~ 50-60Hz |
| Rated Power | 800W |
| Capacity (approx.) | 0.7 L |
| Cook rice capacity | Maximum 3.5 cup of white rice |
| Net Weight (approx.) | 3.5 kg |
| Product Size (W x D x H) (approx.) | 238 x 291 x 197 mm |



4.1 Product Description

- 1. Inner lid
- 2. Inner lid sealing ring
- 3. Handle
- 4. Lid
- 5. Inner pot handle
- 6. Inner pot
- 7. Steam vent
- 8. Control panel
- 9. Lid
- 10. Lid open button
- 11. power cord

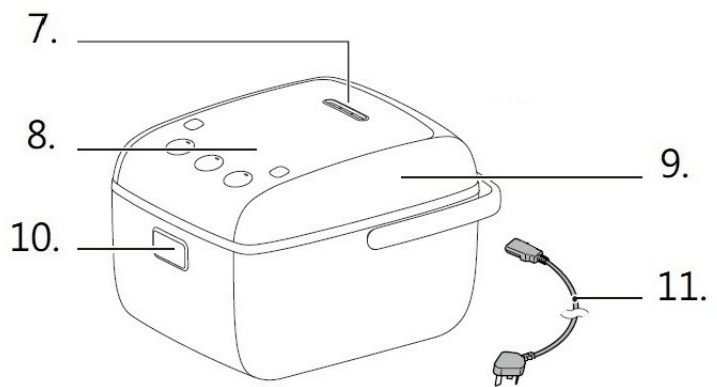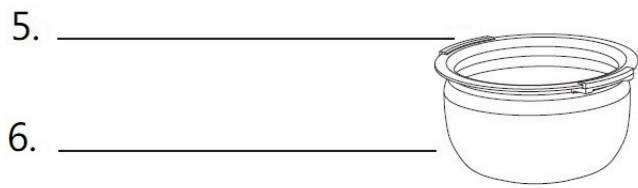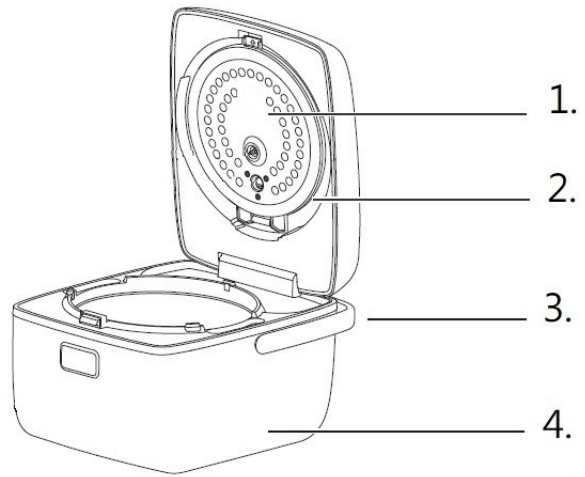


Product Accessories

- 12. measuring cup
- 13. Rice scoop
- 14. Soup scoop
- 15. Steaming basket

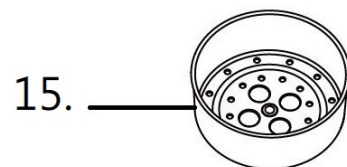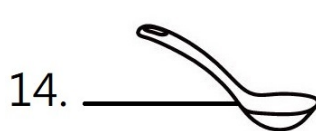

(Above product diagram is for reference only, appearance refers to actual product.)

4.2 Control Panel

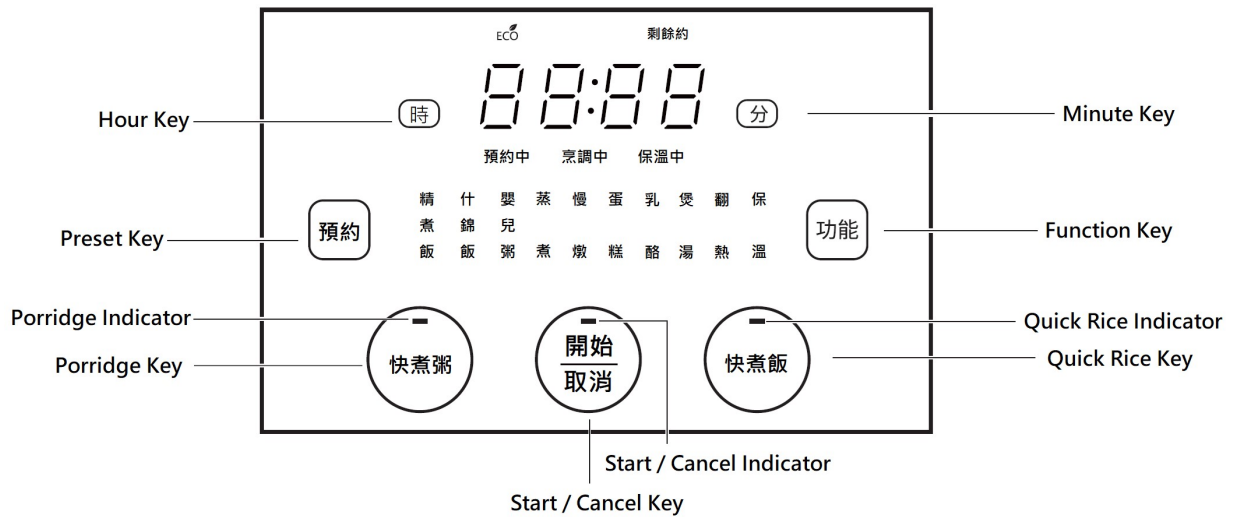

4.3 Display Panel




(Above product diagram is for reference only, appearance refers to actual product.)

5. Operation Instructions

5.1 Adjusting the amount of rice and water


1. Press the open lid button to open the rice cooker lid.
2. Using the original measuring cup correctly. Decide the amount of rice to use based on the amount of rice need and the function, and use the included measuring cup to measure the rice correctly. A cup of rice is approximately 180 ml. Reference below picture.

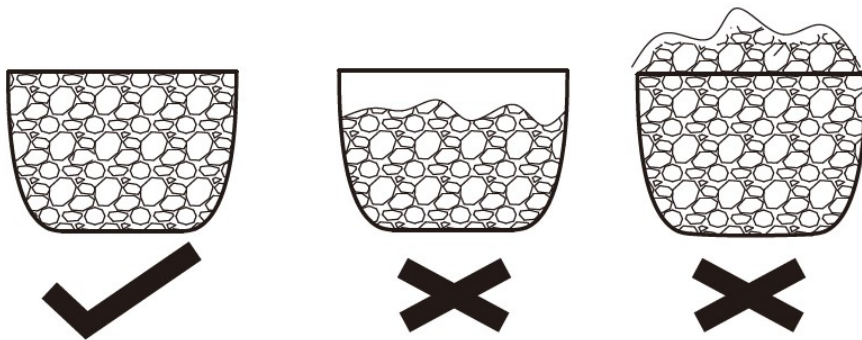


3. Do not wash rice directly in the inner pot, should wash rice in other containers, then after put the rinsed rice in the inner pot.
4. Be sure the rice is evenly distributed in the inner pot, determine the amount of water to add based on the function and the number of cups of rice put in. It can also be adjusted according to personal taste.

Follow the below water level marking to control the added water:



白米 RICE

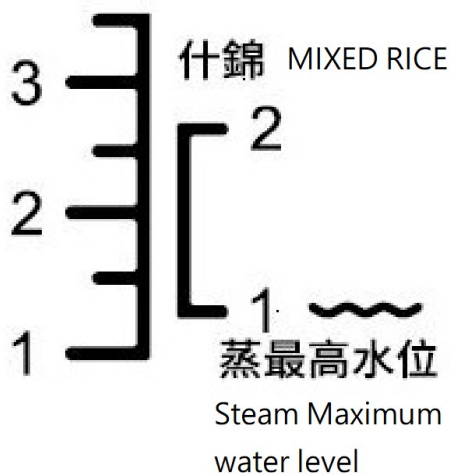

Soup Maximum level

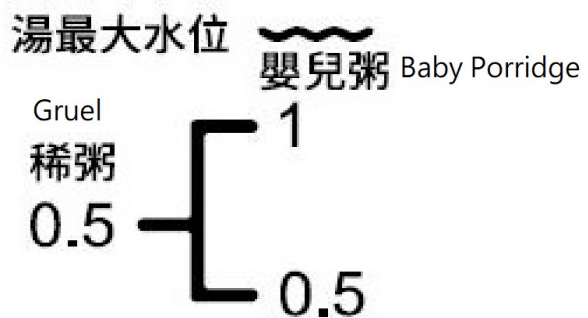

5. Before placing the inner pot into the main unit, please wipe away any water droplets and foreign matter attached to the outside of the inner pot, the inner lid and the bottom of the inner pot.
6. After placing the inner pot into the main unit, gently turn it a few times to ensure that the inner pot is installed in place.
7. Confirm that the inner cover and steam valve assembly have been installed. If the inner cover is not firmly installed, the top cover will not be closed.
8. Close the lid until you hear a 'click'.

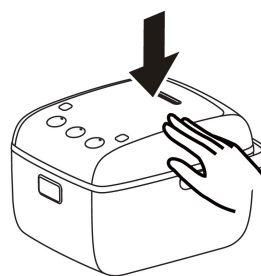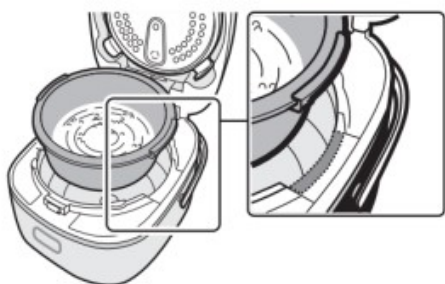

5.2 Operation:

Put the ingredients into the inner pot and add the appropriate amount of water according to the water level mark, then close the lid.

1. After turning on the power, press the 「功能」 key to select the cooking function. For example, Refined Rice (精煮飯), Mixed Rice (什錦飯), Baby Porridge(嬰兒粥), Steam (蒸煮), Stew (慢燉), Cake (蛋糕), Yogurt (乳酪), Soup (煲湯), Reheat (翻熱) and Keep Warm (保溫). Select one of the functions and the corresponding cooking time will be displayed on panel.



2. After pressing the 「快煮粥」 or 「快煮飯」 keys, the product will directly enter the corresponding cooking function, and the corresponding function indicator light and the indicator "開始/取消" light will stay on.
3. Every time you press the 「功能」 key, you will hear a "beep" and the function indicator light will flash. If there is no operation for about 20 seconds in this state, the product will enter the standby state and the panel will display ":" and flash.

4. The power-on default state is the refined rice function. At this time, directly pressing the 「開始/取消」 key will activate the function, the buzzer will make a "beep" sound, the indicator light will stay on and cooking indicator "烹調中" light will light up.
5. During the cooking process, if you want to interrupt cooking, you can press and hold the 「開始/取消」 key for about 3 seconds. The cooking function will be canceled and the product will return to standby mode, and the display will display ":" and flash.
6. When cooking ends, the buzzer will "beep" 5 times, the indicator "開始/取消" light will light up, and the product will enter the keep warm mode. The keep warm function indicator light stays on and displays the keep warm time, which will increase in hours.

Things to note:

1. When using special rice types such as leftover rice and glutinous rice, or when other ingredients or seasonings need to be added for cooking, it is recommended to select the refined rice function.
2. **ATTENTION!** Do not keep food warm for more than 12 hours. (It may cause the food to burn, turn yellow or give off an odor)
3. If the product is unplugged during cooking, the cooking function will be maintained after the power is restored. If you need to cancel the corresponding function early, press the 「開始/取消」 key for about 3 seconds to enter the standby state, and then unplug the power.

5.3 The cooking amount and time of each function

| Function | Max. amount of cooking Rice / Water level marking (Approx.) | Default Cooking time (Approx.) | Adjustable time range | Keep Warm (Approx.) |
|------------------------|---|--------------------------------|-----------------------|---------------------|
| Refined Rice (精煮飯) | 1 - 3.5 Cup / 白米 | 55 mins | N/A | Maximum 12 Hours |
| Quick Rice (快煮飯) | 1 - 3.5 Cup / 白米 | 28 mins | N/A | Maximum 12 Hours |
| Mixed Rice (什錦飯) | 2 Cup / 什錦米 | 90 - 120 mins | N/A | Maximum 12 Hours |
| Baby Porridge (嬰兒粥) | 0.5 - 1 Cup / (稀粥/嬰兒粥) | 90 mins | 60 - 120 mins | Maximum 12 Hours |
| Porridge (快煮粥) | 0.5 - 1 Cup / (稀粥/嬰兒粥) | 40 mins | N/A | Maximum 12 Hours |
| Steam (蒸煮) | 蒸最高水位 | 20 mins | 1 - 60 hours | Maximum 12 Hours |
| Stew (慢燉) | N/A | 1 - 12 hours | 8 hours | N/A |
| Cake (蛋糕) | No over rice 1.5 water level | 45 mins | 45 - 60 mins | N/A |
| Yogurt (乳酪) | N/A | 8 hours | 8 - 12 hours | N/A |
| Soup (煲湯) | 湯最大水位 | 90 mins | 2 - 12 hours | Maximum 12 Hours |
| Reheat (翻熱) | N/A | 25 mins | 25 - 60 mins | N/A |
| Keep Warm (保溫) | N/A | 12 hours | N/A | N/A |

CAUTION:

1. The actual rice cooking time is varied with different rice quantity, water amount, voltage, room temperature, water temperature and rice quality.
2. The rice texture is affected by different rice quantity, water amount and rice quality which are even possible to form crust.
3. The water amount can be adjusted accordingly to personal preference on the rice texture.
4. At according the food based on the characteristics of various ingredients. It is recommended that the reservation time should not be too long, otherwise the food may deteriorate.
5. If user plan to cook for a long time, please pay attention to the shelf life of the ingredients.
6. The function of rice cannot be used for soup, porridge, etc. The user must select the corresponding function for cooking.

5.5 Steam function:

1. When using the steaming function, just pour an appropriate amount of water into the inner pot and place the food on the steaming rack.
2. Press the 「功能」 key to select the steaming function, and press the 「分」 key to adjust the time. Short press for 1-minute increments, and long press for 5-minute increments. The set time does not include the preheating time, so the actual running time will be longer than the set time.
3. Press the 「開始/取消」 key to confirm the function. The cooking indicator light turns solid and cooking starts.

NOTICE! The time displayed under the steam function is the remaining cooking time after the water boils.

5.5 Cake function:

NOTICE! The mixture of eggs, flour, water, etc. must not exceed the 1.5 cup mark on the white rice scale. Otherwise, the cake will expand during baking and easily block the air outlet, which may cause the risk of the top cover of this product exploding.

5.6 Preset function:

This function is only applicable to Refined Rice, Mixed Rice, Baby Porridge, Steaming, and Soup functions. The reservation function supports 24-hour reservations. The time displayed by the reservation function is the time when cooking is completed.

1. First press the 「功能」 key to select the reservation function.




2. Press the 「預約」 key to enter the reservation function. The default reservation time is 2 hours.



ATTENDATION! Some functions cannot be reserved and the next step cannot be performed.

3. Press the 「小時」 and 「分鐘」 keys to adjust the time.

Long pressing the 「小時」 or 「分鐘」 key will cause the time to increase rapidly.

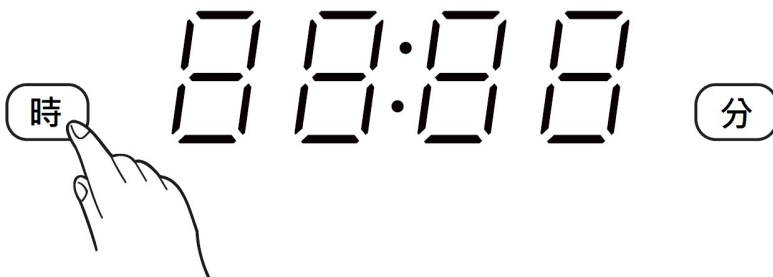

4. After completing the adjustment reservation, press the 「開始/取消」 key to confirm the reservation. Presetting indicator "預約中" light will light up during the reservation.

If user need to cancel the reservation setting, press and hold the 「開始/取消」 key for 3 seconds to cancel the reservation setting.

If user need to change the reservation time or function settings, please cancel the reservation first and then reset the reservation function.

5.7 Keep warm function

1. Press the 「功能」 key to select the keep warm function, and then press the 「開始/取消」 key to confirm the function.
2. After confirming the keep warm function, the keep warm indicator "保溫中" light will light up and the display window will show the cumulative keep warm time, in increments of hours.
3. When keeping warm, occasionally fluff the rice and close the lid to prevent the rice from drying out and clumping.
4. Keep warm for up to 12 hours, after which the product will automatically return to standby mode.
5. Do not keep rice or food warm for too long, otherwise it may produce crispy rice or food, or cause the food to deteriorate.
6. If the power is unplugged while keeping warm, the keep warm function will be maintained after the power is restored. If you need to cancel the keep warm function, press the 「開始/取消」 key for about 3 seconds in the keep warm state, and then unplug the power.
7. Yogurt function does not have a heat preservation function. After the cheese function is completed, it will directly return to the standby state.
8. The keep warm function will directly enter the standby state after completion.

6. Troubleshooting

| Problem | Cause | Solution |
|---|--|--|
| The display is not on | The power cord plug is not plugged in properly | Reinsert the power cord plug into place |
| | The power cord plug or internal parts are damaged | Please contact Shun Hing Electric Service Centre Ltd. for Checking and repairing. |
| Rice and porridge are not cooked properly or Burnt bottom | Adding too little water | Adjust the amount of water added |
| | The bottom of the ceramic inner pot is dirty or has foreign matter | Clean with damp cloth |
| | The lid is not tightly closed | Close the upper cover tightly |
| | Appliance malfunction | Please contact Shun Hing Electric Service Centre Ltd. for Checking and repairing. |
| | Power voltage too high | Use a stable household power supply |
| Overflow when cooking rice or porridge | Adding too much water and rice | Avoid going above the maximum water level of select function, For details, please refer to " Chapter 5.3 The cooking amount and time of each function " |
| Function failure | Power supply is disturbed | Unplug the power cord for 20 seconds and then power it on again, if the situation persists, please contact Shun Hing Electric Service Centre Ltd. for Checking and repairing. |
| Display show F1, F2, F3, F4, F5, F6, F7, C5, C6, C8, U1 | Product failure | Please contact Shun Hing Electric Service Centre Ltd. for Checking and repairing. |

7. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and color are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

8. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. (“The Company”) authorizes Shun Hing Electric Service Centre Ltd. (“SHESC”) to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.



SHUN HING GROUP
信興集團
SINCE 1953

Rasonic 樂信牌

信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道 67 號半島中心 9 樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.com>

電郵：shew@shunhinggroup.com

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, Hong Kong

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.hk>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街 2 號信興中心 11 樓

電話：2406 5666

圖文傳真：2408 0316

網址：<https://www.shunhing-service.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK

Tel: 2406 5666

Fax: 2408 0316

Website: <https://www.shunhing-service.com/en>

客戶服務中心：

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

香港天后琉璃街7號柏景中心22樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F., Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong

Avenida de Venceslau de Morais, No. 193-199, 5 andar - I, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：

<https://www.shunhing-service.com/zh>

For the latest information of Hong Kong and Macau service center, please visit:

<https://www.shunhing-service.com/en>

RHC-T0125