



# RIC-GS21E / RIC-GS22E / RIC-GS29E / RIC-G2F5E / RIC-GM23E / RIC-GB201E 輕便電磁爐 Compact Induction Cooker

- 如型號後面加上(NP)字樣，代表該型號並沒有贈品鍋具。
- If (NP) is marked at the back of the model number, there is no free cookware supplied with the appliance.



僅適用於家庭使用  
For household use only

## 使用說明書 OPERATION MANUAL

- 在使用本產品前，請仔細閱讀本說明書，並妥善保存以備用戶日後查詢。
- Please read the operation manual carefully before using and well keep it in a safe place for future reference.
- 本說明書中的圖示可能有與實物不同的地方，僅供參考。
- Some figures in this manual may not match with the real object, just for reference only.

---

非常感謝您選購樂信牌輕便電磁爐，在使用前請先詳細閱讀本說明書，並保存以備日後參考。

## 目錄

1. 安全注意事項
2. 保存及日常清潔
3. 鍋具的選擇
4. 產品規格及結構
5. 控制面板及操作說明
6. 故障排除
7. 特別聲明
8. 售後服務

### 1. 安全注意事項

使用本產品時，請遵守下列安全注意事項，不遵循或忽視這些安全注意事項會導致傷亡或機件損壞。

#### 1.1 為了防止火災、灼傷和觸電

##### 面板餘溫處理

1. 面板上的△符號表示，使用時及剛使用後面板會變熱，切勿觸摸，以免造成高溫燙傷。
2. 待完全冷卻後才清潔本產品。

##### 使用前

1. 確保當地使用的電壓與本產品上所標明的額定電壓相符。
2. 使用獨立電源插頭。切勿使用電線拖板，以免因電力負荷過度而導致火警或危險。
3. 應把產品平穩放置於乾燥的地方，並須與牆壁保持至少10厘米的距離作散熱用途。

##### 使用時

1. 切勿過度加熱。(應使用低火力段預熱。)
2. 切勿乾燒空鍋，否則容易造成過熱、工作異常及面板變色等問題。
3. **警告！**切勿讓產品置於無人看管的狀態下運作，特別是使用油脂在爐灶進行烹飪時，可能會造成危險或導致火災。
4. **注意！**烹飪過程必須受到監督。短期烹飪過程亦必須持續監督。

##### 使用後

1. 按電源鍵關掉產品，關掉電源及拔出電源插頭，避免因長時間通電導致內部電子組件損毀，甚至引起火警。
2. 如機體尚有餘溫，待散熱風扇完全停止運作後才可拔掉電源插頭。切勿依靠面板感測器關掉產品。

##### 面板注意事項

1. 切勿將物品存放在加熱區，或將攜帶式氣體爐、石油氣罐或罐裝食品置於電磁爐面板上，以防止它們被錯誤加熱而造成爆炸。
2. 切勿在電磁爐運行時，將類似刀、叉、湯匙、蓋子、鋁箔或鋁盤等金屬物或導磁性物品，以及蒸煮袋、磁性指環、手錶或飾物等置於面板上或附近，或直接接觸鍋具，否則可能造成該物品變熱。(被加熱時所產生的熱量或會造成灼傷或受傷。)
3. 切勿讓面板受到外來的猛烈撞擊。(例如重物墜於面板上，可能導致面板暗處產生裂紋。在沒有接受信興電器服務中心有限公司詳細檢查期間強行運作，可能促使面板爆裂，產生危險。)

\*\*\*警告：如面板受到外來的猛烈撞擊或因重物墜落造成破裂，切勿觸摸。應立即停止使用並關掉電源及拔出電源插頭，立即聯絡信興電器服務中心有限公司進行檢查及維修，以免造成電擊、短路或火災等危險。

### 鍋具注意事項

1. 必須使用說明書內建議的合適鍋具，並確保鍋具整潔及底部平穩地置於面板上。否則，產品面板感測器可能失效並導致產品異常升溫或出現故障。
2. 電磁爐專用的鍋具只能放在電磁爐上使用。切勿將電磁爐專用的鍋具用於氣體煮食爐上或混合使用，以免影響烹調效果。
3. 放置鍋具前，請確認鍋具底部及面板上沒有水漬、油漬或其他粘附物。如有，應完成清潔後才使用本產品。
4. 贈品鍋具僅供**火鍋**使用，切勿用於其他用途。

### 請避免油炸烹飪

1. 本產品不帶油溫控制系統。油炸時，或會因油溫過高而導致火災或損壞內部電子組件，故油炸時應緩慢加熱，並留意加熱情況。
2. 若煮食物或油脂加熱時起火，應立即關掉電源。切勿用水滅火，應使用合適的滅火器或使用滅火毯。

### 電磁爐爐頭注意事項

1. 切勿將易燃材料、噴霧劑及煙霧劑等置於產品下方或附近，否則可能導致火災或爆炸。
2. 切勿讓不習慣操作本產品的人獨自使用本產品。
3. 本產品並不為體質、感覺或智力有障礙人士或缺乏經驗(包括小孩)或相關知識的人士使用，除非他們曾經接受負責安全人士的監督或指示。
4. 時常留意烹調情況，避免過熱或乾燒。否則，溫度過高會使安全保護功能自動啟動並停止運作，影響烹調效果。
5. 若有孩童在旁，須加倍小心使用及看管小孩，以確保他們不會把此產品當作玩具。切勿讓小孩單獨使用或將本產品及其電線放於小孩能觸及的地方。
6. 切勿讓嬰兒靠近。
7. 切勿使用外置計時器或遙控系統來操作本產品。
8. 煮食時，鍋具必須放置於煮食區的中央位置上面。避免大幅度移動鍋具，或將鍋具移近至玻璃邊緣，令面板底部的膠殼因鍋具底部的高溫而造成損毀。
9. 如發現電源線有破損，必須聯絡信興電器服務中心有限公司更換，以免發生危險。

## 1.2 防止火災或意外發生

為了避免發生意外，請注意下列事項

1. **注意！**加熱時偶爾會噴濺出食材或液體，這種現象被稱為溢瀉。特別是用於炆煮時，應使用低火力烹調及時刻留意食物烹調情況。
2. 如果是佩帶心臟起搏器人士，請諮詢醫生。(使用本產品或會影響心臟起搏器運作)
3. 保持鍋具平穩。(如鍋具掉下，可能會導致損傷或灼傷。)
4. 鍋具與面板中間不應夾雜紙品或其他物件，讓鍋具直接受熱。(由於鍋具的熱量，物件或會因此而燒焦。)
5. 遠離大量熱氣、蒸氣或濕熱地方；切勿將產品安裝於靠近水源的地方，防止機身進水。
6. 切勿試圖拆卸、維修或改裝本產品，以免釀成意外。如須檢查或維修，請與信興電器服務中心有限公司聯絡。
7. 小心使用電源線，切勿在電源線上放重物或夾住電源線；切勿改裝、用力拉扯或扭曲電線。在拔出或插入插頭時，要用手握穩插頭，並確保將插頭插穩。
8. 切勿將電源線懸掛在桌子、櫥櫃的邊緣或令它接觸發熱的表面。切勿在電源線纏結的情況下使用本產品，否則會加快電源線的損耗。
9. 切勿於同一時間按兩個或以上的功能鍵，亦不要讓熱的物件置於控制面板，因為這會令產品出現錯誤的反應。
10. 切勿以濕手操作產品、插入或拔除插頭。
11. 切勿將本產品用於烹飪以外的其他用途。(用於烹飪以外或會發生故障。)
12. 本產品是家用或在類似環境使用，如：商店內部、辦事處以及其他類似工作環境的廚房區域；客戶在旅館、汽車旅館和其他住宅類型的環境。
13. 本產品只可作家庭使用，切勿在室外使用或用於說明書建議以外的其他用途。使用不當，或作(半)商業用途，或未依照使用說明書操作，維修保養將無效，本公司將不會承擔任何損壞的維修及賠償。
14. 當產品機身或零件出現故障，或不能正常操作，切勿自行使用或更換其他非生產商授權的零件或配件，以免發生危險，否則維修保養無效。
15. 遵從安全守則及避免釀成意外，如需檢查或維修產品，請聯絡信興電器服務中心有限公司(地址印於本說明書的背頁或致電2406 5666)，並確保在檢查或維修時可出示保修卡(印於本產品的外箱)及收據。

### 1.3 重要事項

本產品會釋放磁力線，請將任何容易受磁力影響之物品移離本機

1. 收音機、電視機、助聽器等。(因為它們容易受到干擾。)
2. 磁卡、磁帶車票、銀行卡等。(因為它們的記錄可能被清除或損壞。)

切勿將本產品放置在其他電磁感應設備或任何金屬表面上／附近使用

1. 電磁感應電飯煲或煮食爐等。(因為磁場可能會損壞本產品。)
2. 切勿置於金屬檯面(或金屬表面)上使用，以免導致金屬材料或檯面被錯誤加熱而引起電磁爐機殼發熱，造成危險。

#### 加熱時鍋具發出噪音

如遇到以下情況，輕微轉動、移動或更換鍋具或有助減低共振及共鳴現象：

1. 根據鍋具類型的不同，使用時或會聽到鍋具的共鳴聲。
2. 握住鍋具手柄時，可能會感覺到微小的振動。
3. 加熱時如果移動鍋具，可能會聽到短促的金屬聲。

#### 切勿用鍋底摩擦面板

面板可能會損壞或褪色。

#### 保持進風口／出風口暢通

(進風口／出風口被堵塞會造成過熱，導致產品自動關閉或引致其他災害。)

1. 進風口及出風口分別位於機底的前方及後方。
2. 切勿將本產品放置在地毯、塑膠檯布、紙品或墊子等軟物件上使用，以免堵塞進風口。如果進風口／出風口堵塞，可能造成故障。
3. 切勿將金屬物件(如針或金屬線等)插入產品的進風口／出風口。

### 1.4 高火力加熱注意事項

1. 由於輸出功率大，如油量過少，鍋具會快速受熱，油溫會因迅速上升而產生意外。
2. 高熱力輸出會造成鍋具底部彎曲變形。如使用的油量少或鍋具底部較薄，應使用較低的火力預熱。
3. 煲水時，水一旦沸騰，請立即降低火力。(水有可能會煮沸溢出或噴濺。)

## 2. 保存及日常清潔

1. 清潔前，請先按電源鍵關上本產品及拔出插頭。
2. 面板骯髒時，用扭乾的濕布擦拭。如污漬擦不掉時，用稀釋的中性廚房去污粉或清潔劑清潔後，再用濕布擦拭即可。
3. 機身骯髒時，用扭乾的濕布擦拭。如有油污難以清除時，用稀釋的中性廚房洗潔劑清洗後，再用濕布擦拭即可。
4. 切勿使用蒸氣清潔工具、用水直接沖洗或將產品及其電源線浸入水中清洗。如產品內部零件受潮，可能造成故障或其他災害。
5. 如有果酸食物(例如：醋、果醬、帶有檸檬汁及梅子等食品)黏在面板或邊框上，應立即清潔，否則可能引致褪色。
6. 如有任何塑膠物料、廚房用錫紙、糖類或含有糖的食品不小心融化於發熱的面板上，必須在面板仍是溫熱時用柔軟濕布擦拭，否則冷卻後才清潔或會損壞面板。
7. 切勿使用堅硬刷子或百潔布刷洗爐面。
8. 切勿使用有機溶劑或苯等化學藥品擦拭產品及其面板／控制面板，以免產生化學反應。
9. 經過長時間使用，進風口或出風口會積聚一些灰塵或油脂，並可能影響產品運作。建議使用棉花棒進行定期清潔。
10. 注意防塵、防潮及防蟲的保護，避免蟑螂等昆蟲進入電磁爐內部造成電路板短路。
11. 長期不使用時，請拔下電源插頭，進行清潔後套上塑膠袋並收藏於乾燥的環境。切勿將電源線纏繞在產品四周或壓住電源線，避免令電源線破損。
12. 面板可能會因使用不當(如使用不潔淨底部的鍋具加熱或加熱食材外溢且未及時擦淨)而產生發黃、發黑或劃痕等現象。經常清潔鍋具底部及產品面板，按說明書操作並做好日常保養，可避免或減少此類現象發生。

### 3. 鍋具的選擇

#### 3.1 合適的鍋具(磁鐵能夠黏在鍋具底部)

使用磁鐵可以有效分辨鍋具是否帶有磁性！

1. 材質：鐵或導磁不鏽鋼的鍋具。必須使用註明“適合電磁爐煮食”的鍋具。
2. 形狀：底部直徑必須在12-20厘米範圍內的鍋具，並與面板均勻接觸。
3. 鍋具重量(連盛載食物)不能超過5公斤。



 
不鏽鋼水壺



鐵製鍋



 
磁性不鏽鋼鍋



鐵製彩色鍋



磁性鐵製珐琅壺



鐵板鍋

#### 3.2 不合適的鍋具(磁鐵不能吸在鍋具底部)

1. 材質：非鐵質金屬、不鏽鋼(底部不能導磁)、陶瓷、玻璃、鋁或銅的鍋具。
2. 形狀：底部凹凸差距過大、有弧度、鍋底有支撐、鍋具底部為圓形及底部直徑小於12厘米或大於20厘米。另外，鍋具太輕、底部太薄或沒有明顯紋路亦不適合，因為鍋具可能於加熱過程中結焦、彎曲或移動。
3. 即便標示為「適合電磁爐煮食」的陶製鍋具也不建議使用。因本產品可能無法有效分辨鍋具是否有磁性而無法加熱、操作不穩定、影響煮食效果或令產品啟動其安全功能及出現錯誤訊息。



鋁製水壺



耐熱玻璃鍋



陶鍋



底部凹凸不平



鍋底直徑較小



鍋底附腳

4. 切勿使用電磁爐導熱板。

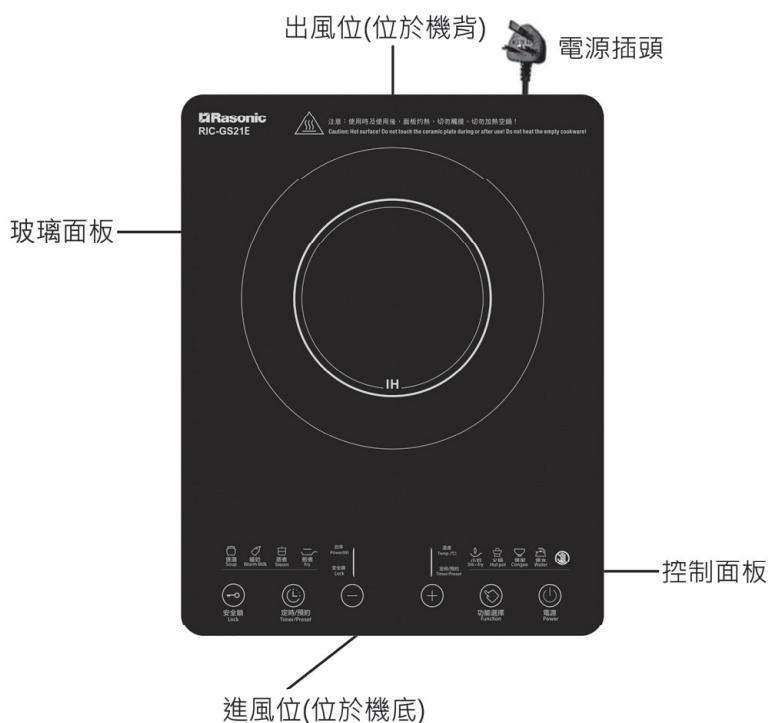


## 4. 產品規格及結構

### 4.1 產品規格

| 型號                  | RIC-GS21E         | RIC-GS22E      | RIC-GS29E      | RIC-G2FSE      | RIC-GM23E      | RIC-GB201E     |
|---------------------|-------------------|----------------|----------------|----------------|----------------|----------------|
| 額定功率                | 2,000瓦            |                |                |                |                |                |
| 額定電壓                | 220-240伏特~50/60赫茲 |                |                |                |                |                |
| 產品尺寸<br>(闊x深x高)(毫米) | 280 x 360 x 42    | 290 x 370 x 39 | 280 x 360 x 42 | 290 x 370 x 39 | 280 x 360 x 42 | 280 x 360 x 42 |
| 淨重(公斤)(約)           | 2.2               | 2.3            | 2.2            | 2.3            | 1.9            | 1.9            |
| 建議鍋具尺寸(毫米)          | 鍋具底部直徑120-200     |                |                |                |                |                |

### 4.2 產品結構

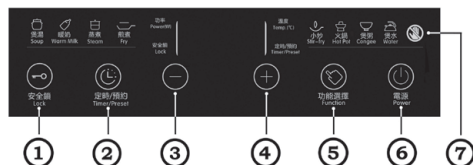


註：各電磁爐型號的結構大致相同，以上圖片只供參考。

## 5. 控制面板及操作說明

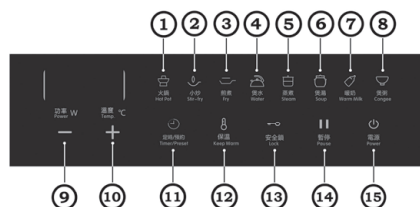
### 5.1 控制面板

#### 1. RIC-GS21E 控制面板



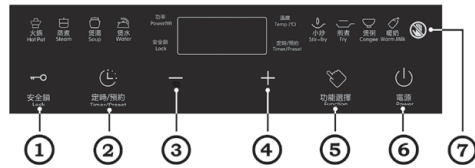
| 按鍵／指示燈 | 名稱     | 圖示 | 功能                                      |
|--------|--------|----|---|
| 1      | 安全鎖鍵   |    | 啟動／解除安全鎖功能                              |
| 2      | 定時／預約鍵 |    | 啟動定時／預約功能                               |
| 3      | 減少鍵    | -  | 減少火力、溫度或時間                              |
| 4      | 加大鍵    | +  | 增加火力、溫度或時間                              |
| 5      | 功能選擇鍵  |    | 切換至各自動功能(煲湯、暖奶、煲粥、煲水)及煮食功能(蒸煮、煎煮、小炒、火鍋) |
| 6      | 電源鍵    |    | 切換至備用或選擇模式                              |
| 7      | 餘溫顯示燈  |    | 爐面過熱時，指示燈會亮起提示用戶                        |

#### 2. RIC-GS22E 控制面板



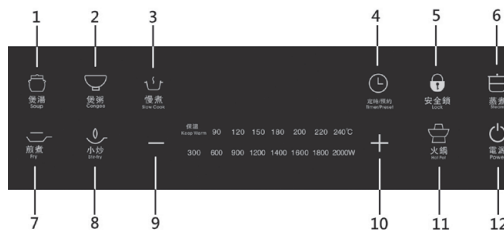
| 按鍵 | 名稱     | 圖示 | 功能            |
|----|--------|----|---------------|
| 1  | 火鍋鍵    |    | 切換至火鍋功能(火力調節) |
| 2  | 小炒鍵    |    | 切換至小炒功能(火力調節) |
| 3  | 煎煮鍵    |    | 切換至煎煮功能(溫度調節) |
| 4  | 煲水鍵    |    | 自動功能          |
| 5  | 蒸煮鍵    |    | 切換至煎煮功能(溫度調節) |
| 6  | 煲湯鍵    |    | 自動功能          |
| 7  | 暖奶鍵    |    | 自動功能          |
| 8  | 煲粥鍵    |    | 自動功能          |
| 9  | 減少鍵    | -  | 減少火力、溫度或時間    |
| 10 | 加大鍵    | +  | 增加火力、溫度或時間    |
| 11 | 定時／預約鍵 |    | 啟動定時／預約功能     |
| 12 | 保溫鍵    |    | 啟動保溫功能        |
| 13 | 安全鎖鍵   |    | 啟動／解除安全鎖功能    |
| 14 | 暫停鍵    |    | 暫停／恢復加熱模式     |
| 15 | 電源鍵    |    | 切換至備用或選擇模式    |

### 3. RIC-GS29E 控制面板



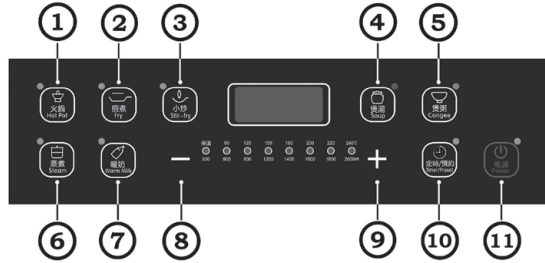
| 按鍵／指示燈 | 名稱     | 圖示 | 功能                                      |
|--------|--------|----|---|
| 1      | 安全鎖鍵   |    | 啟動／解除安全鎖功能                              |
| 2      | 定時／預約鍵 |    | 啟動定時／預約功能                               |
| 3      | 減少鍵    | -  | 減少火力、溫度或時間                              |
| 4      | 加大鍵    | +  | 增加火力、溫度或時間                              |
| 5      | 功能選擇鍵  |    | 切換至各自動功能(煲湯、暖奶、煲粥、煲水)及煮食功能(蒸煮、煎煮、小炒、火鍋) |
| 6      | 電源鍵    |    | 切換至備用或選擇模式                              |
| 7      | 餘溫顯示燈  |    | 爐面過熱時，指示燈會亮起提示用戶                        |

### 4. RIC-G2FSE 控制面板



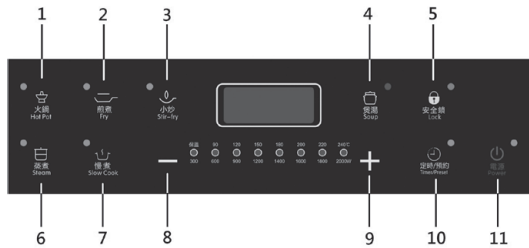
| 按鍵 | 名稱     | 圖示 | 功能            |
|----|--------|----|---------------|
| 1  | 煲湯鍵    |    | 自動功能          |
| 2  | 煲粥鍵    |    | 自動功能          |
| 3  | 慢煮鍵    |    | 切換至慢煮功能(溫度調節) |
| 4  | 定時／預約鍵 |    | 切換至定時／預約功能    |
| 5  | 安全鎖鍵   |    | 啟動／解除安全鎖功能    |
| 6  | 蒸煮鍵    |    | 切換至蒸煮功能(溫度調節) |
| 7  | 煎煮鍵    |    | 切換至煎煮功能(溫度調節) |
| 8  | 小炒鍵    |    | 切換至小炒功能(火力調節) |
| 9  | 減少鍵    | -  | 減少火力、溫度或時間    |
| 10 | 加大鍵    | +  | 增加火力、溫度或時間    |
| 11 | 火鍋鍵    |    | 切換至火鍋功能(火力調節) |
| 12 | 電源鍵    |    | 切換至備用或選擇模式    |

## 5. RIC-GM23E 控制面板



| 按鍵 | 名稱     | 圖示 | 功能            |
|----|--------|----|---------------|
| 1  | 火鍋鍵    |    | 切換至火鍋功能(火力調節) |
| 2  | 煎煮鍵    |    | 切換至煎煮功能(溫度調節) |
| 3  | 小炒鍵    |    | 切換至小炒功能(火力調節) |
| 4  | 煲湯鍵    |    | 自動功能          |
| 5  | 煲粥鍵    |    | 自動功能          |
| 6  | 蒸煮鍵    |    | 自動功能(溫度調節)    |
| 7  | 暖奶鍵    |    | 自動功能          |
| 8  | 減少鍵    | -  | 減少火力、溫度或時間    |
| 9  | 加大鍵    | +  | 增加火力、溫度或時間    |
| 10 | 定時/預約鍵 |    | 啟動定時/預約功能     |
| 11 | 電源鍵    |    | 切換至備用或選擇模式    |

## 6. RIC-GB201E 控制面板



| 按鍵 | 名稱     | 圖示 | 功能            |
|----|--------|----|---------------|
| 1  | 火鍋鍵    |    | 切換至火鍋功能(火力調節) |
| 2  | 煎煮鍵    |    | 切換至煎煮功能(溫度調節) |
| 3  | 小炒鍵    |    | 切換至小炒功能(火力調節) |
| 4  | 煲湯鍵    |    | 自動功能          |
| 5  | 安全鎖鍵   |    | 啟動/解除安全鎖功能    |
| 6  | 蒸煮鍵    |    | 自動功能(溫度調節)    |
| 7  | 慢煮鍵    |    | 切換至慢煮功能(溫度調節) |
| 8  | 減少鍵    | -  | 減少火力、溫度或時間    |
| 9  | 加大鍵    | +  | 增加火力、溫度或時間    |
| 10 | 定時/預約鍵 |    | 啟動定時/預約功能     |
| 11 | 電源鍵    |    | 切換至備用或選擇模式    |

\*\*\* 保持控制面板清潔乾爽，否則控制按鍵的電子感應功能可能會失效或錯誤運作。

 
 
### 5.2 RIC-GS21E 操作說明

 
 
 
接上電源後，電磁爐發出“嗶”一聲，所有指示燈會全部亮起後熄滅，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[○]鍵一次，產品進入選擇模式，按相應的功能鍵使用本產品。完成烹調後可按[○]鍵停止加熱，產品會回復備用狀態。

#### 煮食功能說明

 
 
 
- 火鍋：按[◇]鍵切換至火鍋模式，[☰]圖案的指示燈亮起，顯示屏出現[1400]，表示火鍋功能的預設火力為1400瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。
- 小炒：按[◇]鍵切換至小炒模式，[☷]圖案的指示燈亮起，顯示屏出現[2000]，表示小炒功能的預設火力為2000瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。
- 煎煮：按[◇]鍵切換至煎煮模式，[☷]圖案的指示燈亮起，顯示屏出現[240°]，表示煎煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按[◇]鍵選擇其他功能，或按[○]鍵停止有關運作。
- 煲粥：按[◇]鍵切換至煲粥模式，[☹]圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲粥功能預設時間為1小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。
- 蒸煮：按[◇]鍵切換至蒸煮模式，[☰]圖案的指示燈亮起，顯示屏出現[240°]，表示蒸煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換有關模式可按[◇]鍵選擇其他功能，或按[○]鍵停止有關運作。
- 煲湯：按[◇]鍵切換至煲湯模式，[☹]圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲湯功能預設時間為2小時，完成煲湯烹調程式後，顯示屏出現[End]並於發出“嗶”聲後轉為保溫模式。保溫模式預設為2小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。
- 暖奶：按[◇]鍵切換至暖奶模式，[☷]圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。暖奶功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。
- 煲水：按[◇]鍵切換至煲水模式，[☹]圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲水功能預設時間為20分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按[◇]鍵切換至其他功能，或按[○]鍵停止有關運作。

 
### 定時功能(只適用於火鍋[]、小炒[]、煎煮[]及蒸煮[]模式)

 
 
若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[]鍵一次，[]鍵的指示燈亮起，顯示屏會出現預設定時間[00:00]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[]鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按[]鍵3秒，或按[]鍵返回備用狀態。

 
### 預約功能(只適用於煲粥[]、煲湯[]、煲水[]及暖奶[]模式)

於備用狀態下，按[]鍵進入選擇模式，再按[]鍵一次，[]鍵的指示燈亮起，顯示屏會出現預約時間[00:30]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。


 
 
 
設定時間後，用戶可按[]鍵選擇需要預約的煮食模式，對應的功能指示燈會亮起。選定後，產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後按指定的烹調模式開始運作。

若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按[]鍵3秒，或按[]鍵返回備用狀態。

 
 
 
 
 
 
 
 
 
### 餘溫顯示燈

關機後，如爐面溫度處於約60°C或以上，餘溫顯示燈[]會亮起，表示爐面尚有餘溫，切勿觸摸。

## 5.3 RIC-GS22E 操作說明

接上電源後，電磁爐發出“嗶”一聲，[]鍵的指示燈會閃亮，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[]鍵一次，產品進入選擇模式，[]鍵的指示燈長亮，再按相應的功能鍵使用本產品。完成烹調後可按[]鍵停止加熱，產品會回復備用狀態。

### 煮食功能說明

- 火鍋：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[1400]。此時，火力指示燈會亮起，表示火鍋功能的預設火力為1400瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 小炒：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[2000]。此時，火力指示燈會亮起，表示小炒功能的預設火力為2000瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 煎煮：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[240°]。此時，溫度指示燈會亮起，表示煎煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。

- 煲粥：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[AU]。此時，火力指示燈會亮起，表示產品已於設定火力下運作，用戶不能更改火力。煲粥功能預設時間為1小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 蒸煮：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[240°]。此時，溫度指示燈會亮起，表示蒸煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 煲湯：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[AU]。此時，火力指示燈會亮起，表示產品已於設定火力下運作，用戶不能更改火力。煲湯功能預設時間為2小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 暖奶：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[AU]。此時，火力指示燈會亮起，表示產品已於設定火力下運作，用戶不能更改火力。暖奶功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 煲水：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[AU]。此時，火力指示燈會亮起，表示產品已於預設火力下運作，用戶不能更改火力。煲水功能預設時間為20分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 保溫：按[]鍵一次，[]鍵的指示燈亮起，顯示屏出現[60°]。此時溫度指示燈會亮起，表示產品已於預設溫度下運作，用戶不能更改溫度。保溫功能預設時間為2小時。完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其它功能鍵，或按[]鍵停止有關運作。**注意！此功能不能與定時或預約功能一同使用。**

### 定時功能(只適用於火鍋[]、小炒[]、煎煮[]及蒸煮[]模式)

若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[]鍵一次，[]鍵的指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[]鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按[]鍵3秒，或按[]鍵返回備用狀態。

### 預約功能(只適用於煲粥[]、煲湯[]、煲水[]及暖奶[]模式)

於備用狀態下，按[]鍵進入選擇模式，再按[]鍵一次，[]鍵上方的指示燈亮起，顯示屏會出現預約時間[00:30]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。

設定時間後，用戶可選擇需要預約的煮食模式，對應的功能指示燈會亮起。產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後按指定的烹調模式開始運作。

若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按[]鍵3秒，或按[]鍵返回備用狀態。

## 暫停功能

在運作狀態下，按 $\square$ 鍵一次暫停加熱， $\square$ 鍵的指示燈亮起，顯示屏出現 $[-|-]$ 圖案，表示產品正暫停加熱。用戶可按 $\square$ 鍵一次取消暫停功能。

## 5.4 RIC-GS29E 操作說明

產品接上電源後，電磁爐發出“嗶”一聲，所有指示燈會全部亮起後熄滅，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按 $\odot$ 鍵一次，產品進入選擇模式，按相應的功能鍵使用本產品。完成烹調後可按 $\odot$ 鍵停止加熱，產品會回復備用狀態。

### 煮食功能說明

- 火鍋：按 $\heartsuit$ 鍵切換至火鍋模式， $\heartsuit$ 圖案的指示燈亮起，顯示屏出現[1400]，表示火鍋功能的預設火力為1400瓦。用戶可按 $+$ 和 $-$ 鍵調節火力，共有8段火力選擇。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。
- 蒸煮：按 $\heartsuit$ 鍵切換至蒸煮模式， $\square$ 圖案的指示燈亮起，顯示屏出現[240°]，表示蒸煮功能的預設溫度為240°C。用戶可按 $+$ 和 $-$ 鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換有關模式可按 $\heartsuit$ 鍵選擇其他功能，或按 $\odot$ 鍵停止有關運作。
- 煲湯：按 $\heartsuit$ 鍵切換至煲湯模式， $\square$ 圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲湯功能預設時間為2小時，完成煲湯烹調程式後，顯示屏出現[End]並於發出“嗶”聲後轉為保溫模式。保溫模式預設為2小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。
- 煲水：按 $\heartsuit$ 鍵切換至煲水模式， $\square$ 圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲水功能預設時間為20分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。
- 小炒：按 $\heartsuit$ 鍵切換至小炒模式， $\square$ 圖案的指示燈亮起，顯示屏出現[2000]，表示小炒功能的預設火力為2000瓦。用戶可按 $+$ 和 $-$ 鍵調節火力，共有8段火力選擇。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。
- 煎煮：按 $\heartsuit$ 鍵切換至煎煮模式， $\square$ 圖案的指示燈亮起，顯示屏出現[240°]，表示煎煮功能的預設溫度為240°C。用戶可按 $+$ 和 $-$ 鍵調節溫度，共有8段溫度選擇。若要轉換模式可按 $\heartsuit$ 鍵選擇其他功能，或按 $\odot$ 鍵停止有關運作。
- 煲粥：按 $\heartsuit$ 鍵切換至煲粥模式， $\square$ 圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。煲粥功能預設時間為1小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。
- 暖奶：按 $\heartsuit$ 鍵切換至暖奶模式， $\square$ 圖案的指示燈亮起，顯示屏出現[AU]，表示產品已於預設火力下運作，用戶不能更改火力。暖奶功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按 $\heartsuit$ 鍵切換至其他功能，或按 $\odot$ 鍵停止有關運作。



### 定時功能(只適用於火鍋[🍲]、小炒[🍳]、煎煮[🍲]及蒸煮[🍲]模式)

若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[🕒]鍵一次，[🕒]鍵的指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[🕒]鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按[🕒]鍵3秒，或按[🏠]鍵返回備用狀態。

### 預約功能(只適用於煲粥[🍲]、煲湯[🍲]、煲水[🍲]及暖奶[🍲]模式)

於備用狀態下，按[🕒]鍵進入選擇模式，再按[🕒]鍵一次，[🕒]鍵的指示燈亮起，顯示屏會出現預約時間[00:30]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。

設定時間後，用戶可按[🍲]鍵選擇需要預約的煮食模式，對應的功能指示燈會亮起。選定後，產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後按指定的烹調模式開始運作。

若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按[🕒]鍵3秒，或按[🏠]鍵返回備用狀態。

### 餘溫顯示燈

關機後，如爐面溫度處於約60°C或以上，餘溫顯示燈[🔥]會亮起，表示爐面尚有餘溫，切勿觸摸。

## 5.5 RIC-G2FSE 操作說明

產品接上電源後，電磁爐發出“嗶”一聲，[🏠]鍵的指示燈會閃動顯示，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[🏠]鍵一次，產品進入選擇模式，[🏠]鍵的指示燈長亮，再按相應的功能鍵使用本產品。完成烹調後可按[🏠]鍵停止加熱，產品會回復備用狀態。

### 煮食功能說明

- 慢煮：按[🍲]鍵一次，[🍲]的指示燈亮起，顯示屏出現[90°]，溫度指示燈亦會於90°C位置亮起，表示慢煮功能的預設溫度為90°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵。或按[🏠]鍵停止有關運作。
- 煲湯：按[🍲]鍵一次，[🍲]的指示燈亮起，顯示屏出現[AU]，火力指示燈會由左邊亮起至1200瓦位置，表示煲湯功能的設定火力為1200瓦，並且不能更改火力。煲湯功能預設時間為2小時，完成煲湯功能的烹調程式後，顯示屏出現[End]並於發出“嗶”一聲後自動轉為保溫模式。保溫模式預設時間為2小時，完成後產品會停止加熱並回復為備用狀態。若要轉換模式可按其他功能鍵，或按[🏠]鍵停止有關運作。

- 小炒：按[]鍵一次，[]的指示燈亮起，顯示屏出現[2000]，火力指示燈會由左邊亮起至2000瓦位置，表示小炒功能的預設火力為2000瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 煎煮：按[]鍵一次，[]的指示燈亮起，顯示屏出現[220°]，溫度指示燈亦會於220°C位置亮起，表示煎煮功能的預設溫度為220°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵。或按[]鍵停止有關運作。
- 火鍋：按[]鍵一次，[]的指示燈亮起，顯示屏出現[1400]，火力指示燈會由左邊亮起至1400瓦位置，表示火鍋功能的預設火力為1400瓦。用戶可按[+]和[-]調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 煲粥：按[]鍵一次，[]的指示燈亮起，顯示屏出現[AU]，火力指示燈會由左邊亮起至1200W位置，表示煲粥功能的設定火力為1200瓦，並且不能更改火力。煲粥功能預設時間為1小時，完成煲粥烹調程式後，顯示屏出現[End]並於發出“嗶”一聲後自動轉為保溫模式。保溫模式預設為30分鐘，完成保溫程序後，電磁爐會停止加熱並回復為備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。
- 蒸煮：按[]鍵一次，[]的指示燈亮起，顯示屏出現[240°]，溫度指示燈亦會於240°C位置亮起，表示蒸煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成蒸煮烹調程式後，產品於發出“嗶”一聲後停止加熱並回復為備用狀態。若要轉換模式可按其他功能鍵，或按[]鍵停止有關運作。

#### 定時功能(只適用於慢煮[]、小炒[]、蒸煮[]、煎煮[]及火鍋[]模式)

若用戶需要設定烹煮時間，於選取所需的煮食功能後，再按[]鍵一次，[]鍵的指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。用戶可按[]鍵一次完成設定或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後停止加熱並自動返回備用狀態。如需取消定時功能，用戶可選擇按[]鍵返回備用狀態，或長按[]鍵回復原有設定的功率或溫度下加熱運作。

#### 預約功能(只適用於煲粥[]及煲湯[]模式)

於備用狀態下，按[]鍵進入選擇模式，再按[]鍵一次，[]鍵的指示燈亮起，顯示屏會出現預設定時時間[00:10]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。用戶可按[]鍵一次完成設定或等待顯示屏數字停止閃動。完成設定後，選擇煲粥[]或煲湯[]模式，相應的功能指示燈會亮起。產品開始以倒數方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲並會於指定功能下開始加熱。

若1分鐘內未有設定有關功能，電磁爐將自動返回選擇模式。如需取消預約功能，用戶可長按[]鍵直至“嗶”聲響起或按[]鍵返回備用狀態。

### 5.6 RIC-GM23E 操作說明

產品接上電源後，電磁爐發出“嗶”一聲，[ON]鍵的指示燈會閃動顯示，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[ON]鍵一次，產品進入選擇模式，[ON]鍵的指示燈長亮，再按相應的功能鍵使用本產品。完成烹調後可按[ON]鍵停止加熱，產品會回復備用狀態。

#### 煮食功能說明

- 火鍋：按[火鍋]鍵一次，[火鍋]鍵上方的指示燈亮起，顯示屏出現[1400]。火力指示燈會由左邊亮起至1400W位置，表示火鍋功能的預設火力為1400瓦。用戶可按+[和]-鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 小炒：按[小炒]鍵一次，[小炒]鍵上方的指示燈亮起，顯示屏出現[2000]。火力指示燈會由左邊亮起至2000W位置，表示小炒功能的預設火力為2000瓦。用戶可按+[和]-鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 煎煮：按[煎煮]鍵一次，[煎煮]鍵上方的指示燈亮起，顯示屏出現[240°]。溫度指示燈會於240°C位置亮起，表示煎煮功能的預設溫度為240°C。用戶可按+[和]-鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 煲粥：按[煲粥]鍵一次，[煲粥]鍵上方的指示燈亮起，顯示屏出現[AU]。火力指示燈會由左邊亮起至1200W位置，表示設定火力為1200瓦，用戶不能更改火力。煲粥功能預設時間為1小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 蒸煮：按[蒸煮]鍵一次，[蒸煮]鍵上方的指示燈亮起，顯示屏出現[240°]。溫度指示燈會於240°C位置亮起，表示蒸煮功能的預設溫度為240°C。用戶可按+[和]-鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 煲湯：按[煲湯]鍵一次，[煲湯]鍵上方的指示燈亮起，顯示屏出現[AU]。火力指示燈會由左邊亮起至1200W位置，表示設定火力為1200瓦，用戶不能更改火力。煲湯功能預設時間為2小時，完成後顯示屏會出現[End]，並於發出“嗶”聲後轉為保暖模式。保暖模式預設為2小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。
- 暖奶：按[暖奶]鍵一次，[暖奶]鍵上方的指示燈亮起，顯示屏出現[AU]。火力指示燈會由左邊亮起至600W位置，表示設定火力為600瓦，用戶不能更改火力。暖奶功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[ON]鍵停止有關運作。

#### 定時功能(只適用於火鍋[火鍋]、小炒[小炒]、煎煮[煎煮]及蒸煮[蒸煮]模式)

若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[ON]鍵一次，[ON]鍵上方的指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按+[和]-鍵調整設定時間，[-]鍵設定小時，+[鍵]設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[ON]鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按[ON]鍵3秒，或按[ON]鍵返回備用狀態。

### 預約功能(只適用於煲粥[☐]、煲湯[☐]及暖奶[☐]模式)

於備用狀態下，按[☐]鍵進入選擇模式，再按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏會出現預約時間[00:30]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。

設定時間後，用戶可選擇需要預約的煮食模式，對應的功能指示燈會亮起。產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後按指定的烹調模式開始運作。

若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按[☐]鍵3秒，或按[☐]鍵返回備用狀態。

 
 
## 5.7 RIC-GB201E 操作說明

 


產品接上電源後，電磁爐發出“嗶”一聲，[☐]鍵的指示燈會閃動顯示，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[☐]鍵一次，產品進入選擇模式，[☐]鍵的指示燈長亮，再按相應的功能鍵使用本產品。完成烹調後可按[☐]鍵停止加熱，產品會回復備用狀態。

### 煮食功能說明

 
 
 
- 火鍋：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[1400]。火力指示燈會由左邊亮起至1400W位置，表示火鍋功能的預設火力為1400瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。
- 小炒：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[2000]。火力指示燈會由左邊亮起至2000W位置，表示小炒功能的預設火力為2000瓦。用戶可按[+]和[-]鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。
- 煎煮：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[240°]。溫度指示燈會於240°C位置亮起，表示煎煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。
- 蒸煮：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[240°]。溫度指示燈會於240°C位置亮起，表示蒸煮功能的預設溫度為240°C。用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。蒸煮功能預設時間為30分鐘，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。
- 煲湯：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[AU]。火力指示燈會由左邊亮起至1200W位置，表示設定火力為1200瓦，用戶不能更改火力。煲湯功能預設時間為2小時，完成後顯示屏會出現[End]，並於發出“嗶”聲後轉為保暖模式。保暖模式預設為2小時，完成後產品於發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。
- 慢煮：按[☐]鍵一次，[☐]鍵上方的指示燈亮起，顯示屏出現[90°]。溫度指示燈會於90°C位置亮起，表示慢煮功能的預設溫度為90°C，用戶可按[+]和[-]鍵調節溫度，共有8段溫度選擇。若要轉換模式可按其他功能鍵，或按[☐]鍵停止有關運作。

 
 

### 定時功能(只適用於慢煮[]、火鍋[]、小炒[]、煎煮[]及蒸煮[]模式)

 
 
若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[]鍵一次，[]鍵上方的指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[]鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按[]鍵3秒，或按[]鍵返回備用狀態。

 
 
 

 
### 預約功能(只適用於煲湯[]模式)

 
 
 

 
於備用狀態下，按[]鍵進入選擇模式，再按[]鍵一次，[]鍵上方的指示燈亮起，顯示屏會出現預約時間[00:30]。用戶可按[+]和[-]鍵調整設定時間，[-]鍵設定小時，[+]鍵設定分鐘(長按3秒可作快速調節)，預約時間範圍由1分鐘至23小時59分鐘。

 
 
 
 
設定時間後，用戶可選擇煲湯[]模式，[]鍵上方的指示燈會亮起。產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後開始煲湯[]模式。


 

若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按[]鍵3秒，或按[]鍵返回備用狀態。

## 5.8 安全鎖功能(不適用於RIC-GM23E電磁爐)

在備用狀態下，安全鎖處於解鎖狀態。按[]鍵進入選擇模式，再按[] / []鍵一次以鎖定所有功能鍵，使產品不能選擇功能、調節火力及時間。長按[] / []鍵3秒可解鎖並重新進入選擇模式。

為防止兒童觸碰或因其他意外觸碰而啟動或更改操作模式，選擇加熱功能後，可按[] / []鍵一次鎖定所有功能鍵([]鍵除外)使之不能更改功能、調節時間及火力。在安全鎖啟動狀態下，[] / []鍵的指示燈會亮起。

若同時啟動定時及[安全鎖]功能，顯示窗仍會顯示所設定的時間，但所有按鍵均會被鎖定([]鍵除外)。當倒數結束，電磁爐會發出“嗶”聲然後自動返回備用狀態。此時安全鎖仍處於鎖定狀態，如需要恢復所有功能鍵，用戶只須按[]鍵再長按[] / []鍵解鎖即可。

如用戶於鎖定狀態下直接按[]鍵停止加熱，則[] / []鍵的指示燈依舊會亮起，直至用戶解鎖為止。用戶必須解鎖才能啟動電磁爐及其他烹調功能；否則，於下次啟動本產品時仍會處於鎖定狀態。若直接截斷電源再接通電源，[安全鎖]功能將會自動解除，重新開啟後可如常使用。

## 5.9 附設功能說明

**自動恆溫系統**(適用於小炒[🔥]、煎煮[🍲]及蒸煮[🍲]模式)

小炒[🔥]、煎煮[🍲]及蒸煮[🍲]模式都有一個預先設定的溫度值。當產品到達預設的溫度後，恆溫功能將會自動啟動，並停止加熱以穩定溫度(此時，所選取的煮食功能指示燈會由長亮轉為閃亮)，直至溫度下降至原有的設定值後才會重新起動加熱。因此，電磁爐可能會出現斷斷續續的加熱情況，此乃電磁爐的恆溫系統正在運作。

**自動關機功能**(適用於小炒[🔥]、煎煮[🍲]、蒸煮[🍲]及火鍋[🍲]模式)

啟動產品加熱後，如120分鐘內沒有任何按鍵操作指示，產品會發出5次“嗶”聲提示用戶，然後自動停止運作以確保安全。如用戶需要烹調超過120分鐘，請使用定時功能。

### 散熱風扇延時轉動

完成烹調後，用戶可按[🔴]鍵停止加熱，[🔴]鍵的指示燈會由長亮轉為閃動，即表示產品已轉回備用狀態。**注意!**此時散熱風扇仍會持續轉動，以排除機內的熱氣。待風扇停止運作後，才將電源插頭拔出，以免對產品造成損壞或產生危險。

### 注意事項

使用暖奶[🍼]功能時，建議餵哺嬰兒前先行自行測試奶溫，確保奶溫適合才餵哺嬰兒，避免因直接餵哺而燙傷嬰兒喉部。另外，使用煲粥[🍲]功能時，用戶須不時攪動鍋內食材，避免食材焦著在鍋具底部；由於暖粥很快會變成糊狀，建議盡快享用，以免影響烹調食物的味道。

### 故障代碼

如使用不當或發生問題時，對應故障代碼會顯示於數碼顯示屏上。當產品發生E0至E7故障時，產品會停止加熱同時蜂鳴聲斷續響起。(詳情請參考**標題6.故障排除**的檢查要點及解決方法)

### 6. 故障排除

使用時，如發現產品操作上有問題，在維修前請先對照下表進行檢查及處理。

| 故障現象                | 檢查要點  | 處理方法  |
|---------------------|---|---|
| 接通電源後，按(○)鍵後產品沒有反應。 | 是否停電？   | 待電力恢復後使用。   |
|                     | 保險絲是否斷路？  | 小心檢查原因。若有需要，請聯絡信興電器服務中心有限公司進行檢查及維修。   |
|                     | 電源線插頭是否鬆脫？  |   |
| 開啟電磁爐後不加熱，並發出蜂鳴聲。   | 是否忘記放置鍋具或鍋具不適合？   | 放上或更換適合電磁爐使用的鍋具。  |
|                     | 鍋具是否置於於不正確位置？   | 將鍋具放置於產品的陶瓷面板標示的位置上。  |
|                     | 加熱的鍋具是否經常被移走？   | 將鍋具放到爐頭適當的位置上。  |
| 在正常運作時產品停止運作。       | 是否加熱空鍋或食物溫度過高？  | 請檢查是否錯誤使用。用戶可重新開啟本產品。若有需要，請聯絡信興電器服務中心有限公司進行檢查及維修。                                     |
|                     | 進風口或出風口是否被阻塞或堆積了髒物？   | 清除堵塞在進風口／出風口處的污物，並請保持通風口暢通。   |
|                     | 是否已超過2小時沒有進行操作指示？   | 請重新輸入所需的烹調指示或選用定時功能。  |
| 故障代碼。               | E0 內部電路故障<br>E1 沒有放置鍋具／鍋具不適合<br>E2 產品內部溫度過高<br>E3 電壓過高<br>E4 電壓過低<br>E5 電磁爐爐面感測器開路或短路<br>E6 電磁爐GBT感測器開路或短路<br>E7 爐面溫度過高 | 當出現E1、E2或E7，請檢查是否鍋具問題，或待溫度下降後，再嘗試重新啟動本產品。<br><br>當出現E0、E3-E6時，請聯絡信興電器服務中心有限公司進行檢查及維修。 |

如按照以上處理方法／操作仍然無法恢復正常使用，即時關閉電源，聯絡信興電器服務中心有限公司(電話：2406 5666)進行檢查及維修，並將故障代碼告知信興電器服務中心有限公司。切勿自行拆卸及修理產品，避免產生意外及對產品造成損害。

## 7. 特別聲明

1. 本資料上所有內容經過核對，如有任何印刷及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀、顏色如有改動，皆以實物為準。
3. 如本資料之中英文版本有差異時，應以中文版為準。
4. 使用說明書的電子副本可透過電子郵件發送致客戶，如有需要，請致電信興電工工程有限公司：2861 2767。

## 8. 售後服務

由購買收據日期起之一年保修期內，經信興電器服務中心有限公司之服務人員證實產品於正常使用之情況下發生故障，本公司將提供免費維修或更換零件服務。經更換之任何損壞零件，將歸屬本公司所有。保修範圍不包括修理或更換陶瓷玻璃面板、機殼等零件及贈品鍋具。如不當使用，或作為(半)商業用途，或未依照說明書使用，保修服務將無效，本公司將不會承擔任何損壞的維修責任及賠償。

用戶必須於維修時出示購買/換購收據及蓋有銷售點 / 換購中心印章的產品保修記錄卡（**印在包裝盒上，必須剪下保留**），如有任何疑問，請致電信興電器服務中心有限公司熱線查詢：2406 5666。



Thank you for purchasing Rasonic compact induction cooker. Please read the operation manual carefully before using and well keep it for your future reference.

## Table of Contents


1. Important Safeguards
2. Maintenance and Daily Care
3. Cookware Selection
4. Product Specifications and Configuration
5. Control Panel and Operation Instruction
6. Troubleshooting and Treatment
7. Special Avowal
8. After Sales Service

## 1. Important Safeguards

When using the appliance, follow the basic safety precautions. Failure or negligence in observing these safety precautions could cause injury or appliance damage caused by improper usage :

### 1.1 To prevent fire, burn or electric shocks

#### Treatment for residual heat

1. The symbol  on the top plate represents that top plate is hot during and just after cooking. Do not touch to avoid burning.
2. Clean the appliance after it has cooled down.

#### Before using the induction cooker

1. Make sure the input voltage match the rated voltage marked on the appliance before operation.
2. Use an independent socket for the appliance. Do not use extension cords to avoid overload and risk of fire.
3. Place the appliance on a dry area steadily and at least 10cm away from the wall for heat dissipation.

#### When using the induction cooker

1. Do not overheat. (Use lower power levels for preheating.)
2. Never heat the empty cookware. Otherwise the appliance may overheat, malfunction and top plate discolor.
3. **WARNING!** Do not leave the appliance unattended. Especially when cooking on a pot with fat or oil can be dangerous and may result in a fire.
4. **CAUTION!** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

## After using the induction cooker

1. After operation, shut down and unplug the appliance to avoid damaging the electronic elements or even causing fire due to long-term connect to the electricity.
2. Switch off the appliance when not in use. After the operation of the cooling fan prolong function, unplug the appliance from the socket. Do not rely on the sensor of the top plate to turn off the appliance.

## For the top plate

1. Do not store item on the cooking zone or place portable gas burners, petroleum gas cylinders or canned goods on the top plate. They may explode if they are mistakenly heated.
2. Metallic objects or magnetic material such as knives, forks, spoons, lids, aluminum foil / tray, retort pouch, magnetic ring, watch or accessories should not be placed on or near the top plate, or touch the cookware when the appliance is operating; otherwise, they may get hot. (They may cause burns or injuries by heat generated.)
3. Do not subject the appliance to a crash. (e.g. Dropping heavy object on the appliance may cause invisible cracks under the top plate. Without checked by Shun Hing Electric Service Centre Limited and kept using the appliance may cause further cracks and dangers.)

\*\*\*Warning: If the top plate is cracked, switch off the appliance to avoid the possibility of electric shock, for hot surface of glass-ceramic or similar material which protect live parts, due to subjection to a crash or heavy object felt, stop using immediately, switch off and unplug the appliance. To avoid the possibility of electric shock, short circuit or fire, contact Shun Hing Electric Service Centre Limited for checking and repairing immediately.

### For the cookware

1. Use cookware with a flat and clean bottom as mentioned in the manual, and ensure it is steadily placed on the top plate. Otherwise, the sensor of the appliance may be malfunction and cause abnormal heating.
2. Specific cookware should be used on induction cooker only. Do not attempt to use it on gas cookers. Never use it alternatively as it may affect the cooking result.
3. Before placing cookware on the top plate, make sure there is no water, oil or other attachment in between. If so, clean it before using the appliance.
4. Cookware supplied is for **Hot Pot** only. Do not use it for other purposes.

### Avoid deep-frying cooking

1. The appliance does not equip with oil temperature control system. Overheated oil may catch fire or damage the internal electric elements if deep frying. Always heat fat bit by bit and keep watching as it heats up.
2. If any oil or fat catches fire, switch off the appliance immediately. Do not put out the flames with water. Use suitable fire extinguisher or fire blanket instead.

### For the induction cooker cooking

1. Keep all combustible materials, spray canisters and aerosols away. It may possibly cause fire or explosion.
2. Do not allow unaccustomed people to use the appliance without supervision.
3. The appliance is not intended to use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.

4. Pay attention to the cooking status and temperature to avoid overheating or empty heating. Otherwise, the overheat protection will be activated and the appliance will be shut off automatically when the temperature is too high. It may affect the cooking result.
5. Great care is necessary in using the appliance, especially near children. Children should be supervised to ensure that they do not play with the appliance. Also, children without adult supervision should not operate the appliance and keep them away from the appliance.
6. Keep it out of reach for infants.
7. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
8. Always place the cookware at the center of the cooking zone during operation. Avoid moving the cookware to the edge of the appliance as the heated cookware may damage the plastic enclosure under the top plate.
9. If the power cord is damaged, it must be replaced by Shun Hing Electric Service Centre Limited to avoid hazarding.

## 1.2 To prevent ignition or accidents

### Beware of the following in order to avoid accidents

1. **Attention!** Ingredients or hot water may spout infrequently when heating. This phenomenon is called bumping. Check the condition carefully and stir the ingredients occasionally by using low power levels, especially when stewing.
2. If you wear a cardiac pacemaker, consult with doctor for medical advice. (The operation of the appliance may affect the pacemaker.)
3. The cookware must be placed on the top plate steadily. (If the cookware felt off, it may cause injuries or burns.)

4. Heat the bottom of the cookware directly. Never place paper or other objects between the cookware and the top plate. (Objects may possibly get burnt due to high temperature.)
5. Keep the appliance away from the place of massive hot gas, steam, damp and heat place or water source so as to prevent water penetrating inside the appliance.
6. Do not attempt to disassemble, repair or modify the appliance. For repairing, please contact Shun Hing Electric Service Centre Limited.
7. Handle the power cord with care, do not place heavy object on it or clamp it. Any modification is prohibited to the power cord. Do not stretch or twist the power cord. Always hold the plug tightly when unplugging or plugging into the socket.
8. Do not hang the power cord over the edge of table, counter-top or contact with the hot surfaces. Do not use the appliance when the power cord is tangled, it may let the power cord be frayed and damaged.
9. Make sure to press one function key at a time only. Do not place hot objects or cookware on the control panel as the appliance may function improperly.
10. Do not touch the appliance, plug or unplug the appliance by wet hand.
11. Do not use the appliance for purposes other than cooking. (Using the appliance other than cooking may cause malfunction.)
12. The appliance is intended to be used in household or similar applications such as: staff kitchen area in shops, offices and other working environments; or clients in hotels, motels and other residential type environments.

13. The appliance is for household or similar environment use only. Do not use it outdoors and any other uses that are not recommended in the manual. If the appliance is used improperly or for commercial (or semi-commercial) purpose or if it is not used according to the instruction in the manual, the maintenance guarantee will become invalid and we refuse any liability for damage caused.
14. To prevent hazards occur, when the appliance or parts were malfunction, do not replace with any parts or accessories which is produced without authorization. Otherwise, the maintenance guarantee will become invalid.
15. In order to comply with safety regulations and to avoid hazards, if the appliance needs to be checked or repaired, contact Shun Hing Electric Service Centre Limited (hotline at 2406 5666 or refer to the address found at the back page of the manual), and be reminded that the official invoice and warranty card (printed on the gift box) must be presented for checking or repairing service.

### 1.3 Important notice

**The appliance emits magnetic lines of force. Keep away any object affected by magnetism**

1. Radios, TVs, hearing aids, etc. (They will be susceptible to noise.)
2. Magnetic card, automatic turnstile tickets, bank cards, etc. (The records may be erased or damaged.)

---

### **Do not place the appliance on top of or next to other induction cooking devices or metallic plates**

1. Induction rice cooker, induction cooker, etc. (The magnetic field may damage the appliance.)
2. Do not place the appliance on top of any metallic plate during operation. Otherwise, it may damage the appliance, or cause fire and other hazards.

### **Noise generated by cookware when heating**

If the following situation happens, it may help to alleviate the sound and vibration if the cookware is slightly moved, rotated or replaced:

1. Resonant sounds may be heard depending on the type of cookware used.
2. When holding the handle, user may feel small vibration.
3. If the cookware is moved when heating, a short metallic sound may be heard.

### **Do not rub the top plate against the bottom of cookware**

The top plate may be scratched or discolored.

### **Do not clog up the intake/exhaust air vent**

(When the intake/ exhaust air vent is clogged, the appliance may turn off automatically and overheat may cause other hazards.)

1. The intake vent and exhaust vent are located at the bottom and at the back of the appliance.
2. Do not place the appliance on top of carpet, tablecloth, paper sheet or mat etc. (If the air intake/exhaust vent is clogged, it may cause malfunction.)
3. Do not insert metallic object (such as pins or wire etc.) into the air intake vent and exhaust vent.



## 1.4 When using high power levels

1. The appliance is with strong heating power. If high power level is used in small portion of oil, the cookware will be heated excessively. Oil temperature will rise rapidly and may cause accident.
2. If the bottom of the cookware is thin, overheat may result in cookware deformation. Preheat the cookware with low power levels when using bottom thin cookware or cooking with less oil.
3. When boiling water, trim down the power level as soon as the water was boiled. (Water may boil over or splash around.)

## 2. Maintenance and Daily Care

1. Switch off the appliance by pressing power key and unplug before cleaning.
2. When the top plate is dirty, use a wretched damp cloth to wipe. If object can not be wiped off, use some mild decontamination powder or detergent to wipe, then using a damp cloth to wipe.
3. When the main unit is dirty, wipe it with a soft damp cloth. If the greasiness is hard to wipe off, use mild detergent to clean and wipe it with a damp cloth.
4. Do not use steam cleaner, rinse directly with water, or immerse the appliance and its power cord in water. If the water penetrates the electrical parts built into the unit, it may cause malfunction or other hazards.
5. If acidic food (e.g. Vinegar, jam or food containing lemon juice or plum, etc.) sticks to the top plate or top frame, wipe it off immediately. Otherwise, the top plate or top frame may be discolored.

6. Materials including plastic, aluminum foil, sugar or any foodstuff contain sugar are already burnt on or melted on the cooking zone unintentionally. It must be removed or cleaned immediately with soft damp cloth when the top plate is still warm. Otherwise, it may damage the top plate when cool down.
7. Do not use hard brush or scouring pad to clean the top plate.
8. Do not use any chemicals such as organic solvent or benzene to wipe the top plate / control panel, so as not to make chemical reaction.
9. After using a long time, dust and grease may accumulate on the air intake / exhaust air vent which may affect the cooker's operation. Clean the appliance regularly and make use of cotton stick.
10. Pay attention to pest control, dust and moisture protection. Protect the appliance against cockroaches and other insects from entering the interior of the appliance to avoid short circuit.
11. Disconnect the power plug when the appliance not in use for long time. Store in a dry place, and clean it before packing it in a plastic bag. Never wrap the power cord tightly around the appliance or put any pressure on the power cord when the appliance is stored as it could cause the power cord to fray and damage.
12. Top plate may suffer from damages such as color changes to yellow, black or scratched for improper using (e.g. cook with dirty bottom cookware or do not clean immediately after the overflow of soup etc.). User can avoid or reduce such phenomena if user operate according to the manual and do daily maintenance.

### 3. Cookware Selection

#### 3.1 Suitable Cookware for Induction Cooker

(Magnetic Cookware – A magnet can be stuck at the bottom of cookware)

Determine the magnetic cookware by means of magnet!

1. Material: Cookware is made of iron or magnetic stainless steel. It is necessary to use the cookware stated "Suitable for induction cooking".
2. Shape: Flat bottom base cookware with the diameter in between 12-20 cm and can contact evenly with the top plate.
3. Weight: The maximum weight (including ingredients) must not exceed 5 kg.



 
Stainless steel pot



Iron pan



 
Magnetic stainless steel pan



Iron color pan



Magnetic Iron enamel pan



Iron board pan

#### 3.2 Unsuitable Cookware for Induction cooker

(Non-magnetic cookware – A magnet cannot stick at the bottom of cookware)

1. Material: Cookware is made of non-ferric metal, stainless steel with non-magnetic base (A magnet will not stick to the bottom of cookware), ceramic, glass, aluminum and copper.
2. Shape: Uneven base, curved, has protrusions or legs, the bottom of the cookware is round. And the bottom diameter is less than 12cm or more than 20cm. Too light, too thin bottom or base without clear grooves cookware is unsuitable too because it may get warped or cause movement during heating.
3. Ceramic cookware such as earthen cookware is not suggested to be used, even they are stated "Suitable for induction cooking". Since it is difficult to distinguish the cookware is magnetic or not which may result in malfunction, unstable operation, improper cooking activation of the safety protection function or even operation error may occur.



Aluminum pot



Pyrex pan



Pottery pan



Bottom concave convex



Bottom diameter too small



Bottom with foot

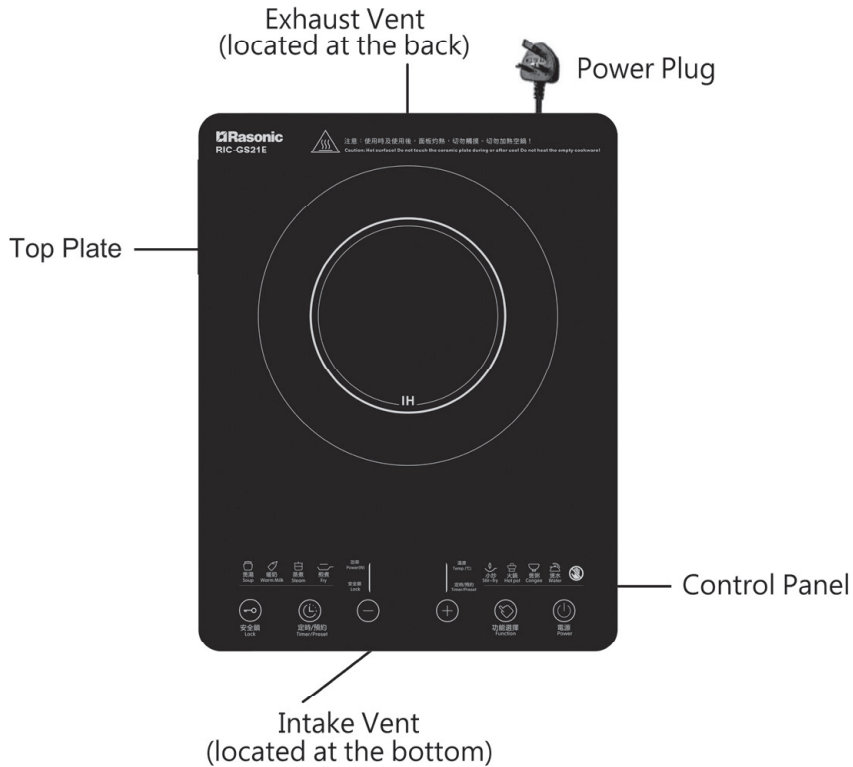
4. Do not use the magnetic plates.

## 4. Product Specifications and Configuration

### 4.1 Product Specifications

|                                  |   |                |                |                |                |                |
|----------------------------------|---|----------------|----------------|----------------|----------------|----------------|
| Model                            | RIC-GS21E                                 | RIC-GS22E      | RIC-GS29E      | RIC-G2F5E      | RIC-GM23E      | RIC-GB201E     |
| Rated Power                      | 2,000W                                    |                |                |                |                |                |
| Rated Voltage                    | 220-240V~ 50/60Hz                         |                |                |                |                |                |
| Unit Dimensions (W x D x H) (mm) | 280 x 360 x 42                            | 290 x 370 x 39 | 280 x 360 x 42 | 290 x 370 x 39 | 280 x 360 x 42 | 280 x 360 x 42 |
| Net Weight (kg)                  | 2.2                                       | 2.3            | 2.2            | 2.3            | 1.9            | 1.9            |
| Required cookware size (mm)      | Cookware base diameter in between 120-200 |                |                |                |                |                |

### 4.2 Product Configuration

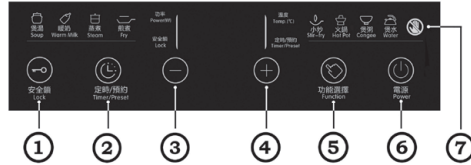


Remark: The product appearance and color are subject to the actual appliance. This picture is for reference only.

## 5. Control Panel and Operation Instruction

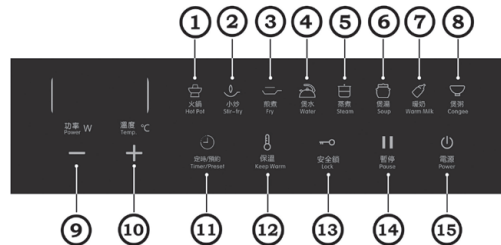
### 5.1 Control Panel

#### 1. RIC-GS21E Control Panel



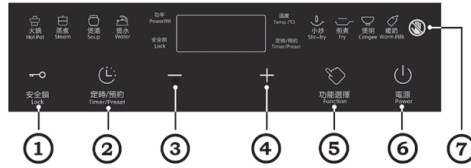
| Key/Indicator | Name         | Icon | Description  |
|---------------|--------------|------|--|
| 1             | Lock         |      | Activate/deactivate safety lock function   |
| 2             | Timer/Preset |      | Activate timer or preset function  |
| 3             | Decrease     | -    | Decrease the power, temperature or time settings   |
| 4             | Increase     | +    | Increase the power, temperature or time settings   |
| 5             | Function     |      | Select between different auto modes (Soup, Warm Milk, Congee, Water) and cooking modes (Steam, Fry, Stir-fry, Hot Pot) |
| 6             | Power        |      | Switch between "Standby" or "Selection" modes  |
| 7             | CAUTION      |      | Light on when hot surface detect on top plate  |

#### 2. RIC-GS22E Control Panel



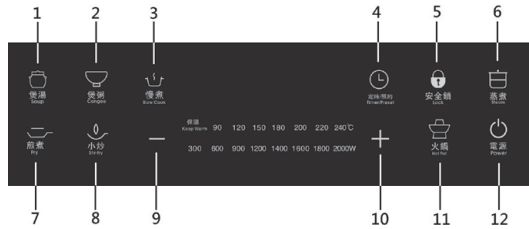
| Key | Name         | Icon | Description                                       |
|-----|--------------|------|---|
| 1   | Hot Pot      |      | Switch to hot pot function (Power adjustment)     |
| 2   | Stir-fry     |      | Switch to stir-fry function (Power adjustment)    |
| 3   | Fry          |      | Switch to fry function (Temperature adjustment)   |
| 4   | Water        |      | Auto function                                     |
| 5   | Steam        |      | Switch to steam function (Temperature adjustment) |
| 6   | Soup         |      | Auto function                                     |
| 7   | Warm Milk    |      | Auto function                                     |
| 8   | Congee       |      | Auto function                                     |
| 9   | Decrease     | -    | Decrease the power, temperature or time settings  |
| 10  | Increase     | +    | Increase the power, temperature or time settings  |
| 11  | Timer/Preset |      | Activate timer or preset function                 |
| 12  | Keep Warm    |      | Activate keep warm function                       |
| 13  | Lock         |      | Activate/deactivate safety lock function          |
| 14  | Pause        |      | Pause/resume cooking modes                        |
| 15  | Power        |      | Switch between "Standby" or "Selection" modes     |

### 3. RIC-GS29E Control Panel



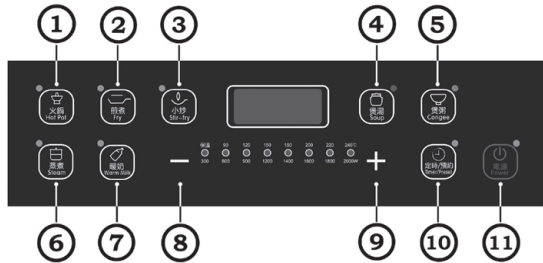
| Key/Indicator | Name         | Icon | Description  |
|---------------|--------------|------|--|
| 1             | Lock         |      | Activate/deactivate safety lock function   |
| 2             | Timer/Preset |      | Activate timer or preset function  |
| 3             | Decrease     |      | Decrease the power, temperature or time settings   |
| 4             | Increase     |      | Increase the power, temperature or time settings   |
| 5             | Function     |      | Select between different auto modes (Soup, Warm Milk, Congee, Water) and cooking modes (Steam, Fry, Stir-fry, Hot Pot) |
| 6             | Power        |      | Switch between "Standby" or "Selection" modes  |
| 7             | CAUTION      |      | Light on when hot surface detect on top plate  |

### 4. RIC-G2FSE Control Panel



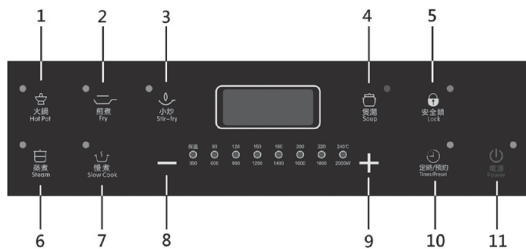
| Key | Name         | Icon | Description   |
|-----|--------------|------|---|
| 1   | Soup         |      | Auto Function   |
| 2   | Congee       |      | Auto Function   |
| 3   | Slow cook    |      | Switch to slow cook function (Temperature adjustment) |
| 4   | Timer/Preset |      | Switch between timer and preset function              |
| 5   | Lock         |      | Activate/deactivate safety lock function              |
| 6   | Steam        |      | Switch to steam function (Temperature adjustment)     |
| 7   | Fry          |      | Switch to fry function (Temperature adjustment)       |
| 8   | Stir-fry     |      | Switch to stir-fry function (Power adjustment)        |
| 9   | Decrease     |      | Decrease the power, temperature or time settings      |
| 10  | Increase     |      | Increase the power, temperature or time settings      |
| 11  | Hot Pot      |      | Switch to hot pot function (Power adjustment)         |
| 12  | Power        |      | Switch between "Standby" or "Selection" mode          |

### 5. RIC-GM23E Control Panel



| Key | Name         | Icon | Description                                      |
|-----|--------------|------|--|
| 1   | Hot Pot      |      | Switch to hot pot function (Power adjustment)    |
| 2   | Fry          |      | Switch to fry function (Temperature adjustment)  |
| 3   | Stir-fry     |      | Switch to stir-fry function (Power adjustment)   |
| 4   | Soup         |      | Auto function                                    |
| 5   | Congee       |      | Auto function                                    |
| 6   | Steam        |      | Auto function (Temperature adjustment)           |
| 7   | Warm Milk    |      | Auto function                                    |
| 8   | Decrease     | -    | Decrease the power, temperature or time settings |
| 9   | Increase     | +    | Increase the power, temperature or time settings |
| 10  | Timer/Preset |      | Activate timer or preset function                |
| 11  | Power        |      | Switch between "Standby" or "Selection" modes    |

### 6. RIC-GB201E Control Panel



| Key | Name         | Icon | Description   |
|-----|--------------|------|---|
| 1   | Hot Pot      |      | Switch to hot pot function (Power adjustment)         |
| 2   | Fry          |      | Switch to fry function (Temperature adjustment)       |
| 3   | Stir-fry     |      | Switch to stir-fry function (Power adjustment)        |
| 4   | Soup         |      | Auto function   |
| 5   | Lock         |      | Activate/deactivate safety lock function              |
| 6   | Steam        |      | Auto function (Temperature adjustment)                |
| 7   | Slow cook    |      | Switch to slow cook function (Temperature adjustment) |
| 8   | Decrease     | -    | Decrease the power, temperature or time settings      |
| 9   | Increase     | +    | Increase the power, temperature or time settings      |
| 10  | Timer/Preset |      | Activate timer or preset function                     |
| 11  | Power        |      | Switch between "Standby" or "Selection" modes         |

\*\*\* Keep the control panel clean and dry. Otherwise, the electronic sensor of keys will be program fault or malfunction.

## 5.2 RIC-GS21E Operation Instructions

After inserting the plug into the socket, a “Beep” will emit and all indicators will twinkle at the same time, indicating the unit in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. The appliance will go to selection mode when the [⏻] key is pressed. Press corresponding function keys to start operation. Return to standby mode by pressing [⏻] key after cooking.

### Cooking Mode

- Hot Pot: Press the [🍲] key until the [🍲] indicator lights up, display will show [1400] representing that the default power is 1400W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Stir-fry: Press the [🍲] key until the [🍲] indicator lights up, display will show [2000] representing that the default power is 2000W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Fry: Press the [🍲] key until the [🍲] indicator lights up, display will show [240°] representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Congee: Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 1 hour. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Steam: Press the [🍲] key until the [🍲] indicator lights up, display will show [240°] representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. The default operation time is 30 minutes. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Soup: Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 2 hours. Once finish, a “Beep” will emit and the display will show [End]. Keep warm mode will then start and operate 2 hours. The appliance will return to standby mode once keep warm mode completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Warm Milk: Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 30 minutes, a “Beep” will emit and the appliance will return to standby mode once completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Water: Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 20 minutes, a “Beep” will emit and the appliance will return to standby mode once completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.



### Timer Function (Only applicable to Hot Pot[🍲], Stir-fry[🍳], Fry[🍳] and Steam[🍲] modes)

User can set the cooking time when specific cooking mode is selected. Press the [🕒] key once to access the timer function, the [🕒] indicator will light up. Display will show the default time [00: 00]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

User can press [🕒] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time on the display. When the countdown is finished, the operation will stop and change to standby mode after a "Beep". To cancel this function, user can either press the [🔌] key to return to standby mode or press and hold the [🕒] key by 3 seconds.

### Preset Function (Only applicable to Congee[🍲], Soup[🍲], Water[🍲] and Warm Milk[🍲] modes)

Under standby mode, enter the selection mode by pressing [🔌] key. Then press [🕒] key once to access preset function. The [🕒] indicator will light up accordingly. Display will flash and show the default preset time [00: 30]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes.

After setting the time, select desired cooking mode and corresponding indicator will light up accordingly. Once confirmed, the appliance will start to countdown by showing the remaining time on the display. A "Beep" will emit after the countdown and the appliance will operate based on desired setting.

The appliance will change to standby mode if no cooking mode is chosen within 1 minute. To cancel this function, press and hold the [🕒] key for 3 seconds or [🔌] key once to change to standby mode.

### CAUTION Indicator

After finishing the operation, if the temperature of the top plate reaches 60°C or above, the caution indicator [🔥] will be statically light up, representing that the top plate still get hot remained. Do not touch it.

## 5.3 RIC-GS22E Operation Instructions

After inserting the plug into the socket, a "Beep" will emit and the [🔌] indicator will start to flashing, indicating the appliance in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. When the [🔌] key is pressed, the appliance goes to selection mode and the [🔌] indicator remains light up. Press corresponding function keys to start operation. Return to standby mode by pressing [🔌] key after operation.

### Cooking Mode

- Hot Pot: Press the [🍲] key and the [🍲] indicator lights up. Power indicator will light up and display will show [1400] representing that the default power is 1400W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [🔌] key to stop the operation.

- Stir-fry: Press the [👉] key and the [👉] indicator lights up. Power indicator will light up and display will show [2000] representing that the default power is 2000W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Fry: Press the [👉] key and the [👉] indicator lights up. Temperature indicator will light up and display will show [240°C], representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Congee: Press the [👉] key and the [👉] indicator lights up. Power indicator will light up and display will show [AU], representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 1 hour. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Steam: Press the [👉] key and the [👉] indicator lights up. Temperature indicator will light up and display will show [240°C] representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Soup: Press the [👉] key and the [👉] indicator lights up. Power indicator will light up and display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 2 hours. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Warm Milk: Press the [👉] key and the [👉] indicator lights up. Power indicator will light up and display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 30 minutes. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Water: Press the [👉] key and the [👉] indicator lights up. Power indicator will light up and display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 20 minutes. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [👉] key to stop the operation.
- Keep Warm: Press the [👉] key and the [👉] indicator lights up. Temperature indicator will light up and display will show [60°], representing that the appliance operate under default temperature level, which cannot be adjusted. The default operation time is 2 hours. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [👉] key to stop the operation. **Attention! This mode cannot compatible with timer and preset functions.**

#### Timer Function (Only applicable to Hot Pot[👉], Stir-fry[👉], Fry[👉]and Steam[👉] modes)

User can set the cooking time when specific cooking mode is selected. Press the [👉] key once to access the timer function, the [👉] indicator will light up. Display will show the default time [00:00]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

User can press [⏻] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time on the display. When the countdown is finished, the operation will stop and change to standby mode after a "Beep". To cancel this function, user can either press the [⏻] key to return to standby mode or press and hold the [⏻] key by 3 seconds.

**Preset Function** (Only applicable to Congee[🍲], Soup[🍲], Water[🍲] and Warm Milk[🍲] modes)  
Under standby mode, enter the selection mode by pressing [⏻] key. Press [⏻] key once to access preset function and the [⏻] indicator will light up accordingly. Display will flash and show the default preset time [00: 30]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes.

After setting the time, select desired cooking mode and corresponding indicator will light up accordingly. Once confirmed, the appliance will start to countdown by showing the remaining time on the display. A "Beep" will emit after the countdown and the appliance will operate based on desired setting.

The appliance will change to standby mode if no cooking mode is chosen within 1 minute. To cancel this function, press and hold the [⏻] key for 3 seconds or change to standby mode by [⏻] key.

### Pause Function

During operation, press the [⏻] key once to pause the operation and the [⏻] indicator will flash and display will show [-|-]. User can press the [⏻] key once to resume the operation.

## 5.4 RIC-GS29E Operation Instructions

After inserting the plug into the socket, a "Beep" will emit and all indicators will twinkle at the same time, indicating the unit in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. The appliance will go to selection mode when the [⏻] key is pressed. Press corresponding function keys to start operation. Return to standby mode by pressing [⏻] key after cooking.

### Cooking Mode

- Hot Pot: Press the [🍲] key until the [🍲] indicator lights up, display will show [1400] representing that the default power is 1400W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.
- Steam: Press the [🍲] key until the [🍲] indicator lights up, display will show [240°] representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. The default operation time is 30 minutes. Once finish, a "Beep" will emit and the appliance will return to standby mode. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [⏻] key to stop the operation.

- **Soup:** Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 2 hours. Once finish, a “Beep” will emit and the display will show [End]. Keep warm mode will then start and operate 2 hours. The appliance will return to standby mode once keep warm mode completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.
- **Water:** Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 20 minutes, a “Beep” will emit and the appliance will return to standby mode once completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.
- **Stir-fry:** Press the [🍲] key until the [🍲] indicator lights up, display will show [2000] representing that the default power is 2000W. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.
- **Fry:** Press the [🍲] key until the [🍲] indicator lights up, display will show [240°] representing that the default temperature is 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.
- **Congee:** Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 1 hour. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.
- **Warm Milk:** Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] representing that the appliance operate under default power level, which cannot be adjusted. The default operation time is 30 minutes, a “Beep” will emit and the appliance will return to standby mode once completed. To change or cancel this mode, press [🍲] key to switch to other cooking modes or [🔴] key to stop the operation.

**Timer Function** (Only applicable to Hot Pot[🍲], Stir-fry[🍲], Fry[🍲] and Steam[🍲] modes)

User can set the cooking time when specific cooking mode is selected. Press the [🕒] key once to access the timer function, the [🕒] indicator will light up. Display will show the default time [00: 00]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

User can press [🕒] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time on the display. When the countdown is finished, the operation will stop and change to standby mode after a “Beep”. To cancel this function, user can either press the [🔴] key to return to standby mode or press and hold the [🕒] key by 3 seconds.

**Preset Function** (Only applicable to Congee [碗], Soup [碗], Water [壺] and Warm Milk [杯] modes)  
Under standby mode, enter the selection mode by pressing [⏻] key. Then press [⏻] key once to access preset function. The [⏻] indicator will light up accordingly. Display will flash and show the default preset time [00: 30]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes.

After setting the time, select desired cooking mode and corresponding indicator will light up accordingly. Once confirmed, the appliance will start to countdown by showing the remaining time on the display. A "Beep" will emit after the countdown and the appliance will operate based on desired setting.

The appliance will change to standby mode if no cooking mode is chosen within 1 minute. To cancel this function, press and hold the [⏻] key for 3 seconds or [⏻] key once to change to standby mode.

### CAUTION Indicator

After finishing the operation, if the temperature of the top plate reaches 60°C or above, the caution indicator [⚠] will be statically light up, representing that the top plate still get hot remained. Do not touch it.

## 5.5 RIC-G2FSE Operation Instructions

After inserting the plug into the socket, a "Beep" will emit and the [⏻] indicator will start to flash, indicating the appliance in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. When the [⏻] key is pressed, the appliance goes to selection mode and the [⏻] indicator remains light up. Press corresponding function keys to start operation. Return to standby mode by pressing [⏻] key after cooking.

### Cooking Mode

- Slow cook: Press the [⏻] key once until the [⏻] indicator lights up, display will show [90°] representing that the default temperature is 90°C, and the temperature level indicator will light up accordingly. User can adjust the temperature level by pressing the [+] and [-] keys. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Soup: Press the [碗] key once until the [碗] indicator lights up, display will show [AU] and the power level indicators will light up from left to right until 1200W reached, representing that the default power is 1200W, which is not adjustable. The default operation time is 2 hours, a "Beep" will emit and the display will show [End]. The appliance will change to keep warm mode and remain in operation for 2 hours. It will return to standby mode after keep warm mode is finished. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Stir-fry: Press the [⏻] key once until the [⏻] indicator lights up, display will show [2000] representing that the default power is 2000W, and the power indicators will light up from left to right until 2000W reached. User can adjust the power by pressing the [+] and [-] keys. There are 8 power levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Fry: Press the [⏻] key once until the [⏻] indicator lights up, display will show [220°] representing that the default temperature is 220°C, and the temperature level indicator will light up accordingly. User can adjust the temperature level by pressing the [+] and [-] keys. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.

- Hot pot: Press the [🍲] key once until the [🍲] indicator lights up, display will show [1400] representing that the default power is 1400W, and the power indicators will light up from left to right until 1400W reached. User can adjust the power level by pressing the [+] and [-] keys. There are 8 power levels in total. To change or cancel this mode, press other function keys or [🔒] key to stop the operation.
- Congee: Press the [🍲] key until the [🍲] indicator lights up, display will show [AU] and the power level indicator(s) will light up from left to right until 1200W reached, representing that the default power is 1200W, which is not adjustable. The default operation time is 1 hour, a "Beep" will emit and the display will show [End]. The appliance will change to keep warm mode and remain in operation for 30 minutes. It will return to standby mode after keep warm mode is finished. To change or cancel this mode, press other function keys or [🔒] key to stop the operation.
- Steam: Press the [🍲] key once until the [🍲] indicator lights up, display will show [240°] representing that the default temperature is 240°C, and the temperature level indicator will light up accordingly. User can adjust the temperature level by pressing the [+] or [-] key. There are 8 temperature levels in total. The default operation time is 30 minutes, a "Beep" will emit and the appliance will return to standby mode after the operation. To change or cancel this mode, press other function keys or [🔒] key to stop the operation.

**Timer Function** (Only applicable to Slow cook [🍲], Stir-fry [🍲], Steam [🍲], Fry [🍲] and Hot Pot [🍲] modes)

User can set the cooking time when specific cooking mode is selected. Press the [🕒] key once to access the timer function, the [🕒] indicator will light up. Display will show the default time [00:00], user can press [+] or [-] key to set the desired time: [-] key to set the hour and [+] to set the minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes. After setting, user can press [🕒] key once to confirm or wait until the display stop flashing. After the "Beep" signal, the appliance will stop the operation and change to standby mode automatically when the end of the countdown. To cancel this function, user can either press the [🔒] key to return to standby mode or hold the [🕒] key to resume the desired power or temperature operation.

**Preset Function** (Only applicable to Congee [🍲] and Soup [🍲] modes)

Under standby mode, enter the selection mode by pressing [🔒] key. Then press [🕒] key once to access preset function. The [🕒] indicator will light up. Display will show the default time [00:10], user can press [+] or [-] key to set for the desired time: [-] key to set the hour and [+] to set the minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes. User can press [🕒] key once to confirm or wait until the display stop flashing. Then, select Congee [🍲] or Soup [🍲] mode to finish the setting and the indicator will light up accordingly. When the countdown is finished, a "Beep" will emit and the appliance will operate based on desired setting.

The appliance will switch to selection mode automatically if no function is chosen within 1 minute. To cancel this function, press and hold the [🕒] key until a "Beep" is heard or [🔒] key once to stop and change to standby mode.

### 5.6 RIC-GM23E Operation Instructions

After inserting the plug into the socket, a “Beep” will emit and the [⏻] indicator will start to flash, indicating the appliance in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. When the [⏻] key is pressed, the appliance goes to selection mode and the [⏻] indicator remains light up. Press corresponding function keys to start operation. Return to standby mode by pressing [⏻] key after cooking.

#### Cooking Mode

- Hot Pot: Press the [🍲] key and the [🍲] indicator lights up. Display will show [1400] representing that the default power is 1400W, and the power indicators will light up from left to right until 1400W reached. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Stir-fry: Press the [🍳] key and the [🍳] indicator lights up. Display will show [2000] representing that the default power is 2000W, and the power indicators will light up from left to right until 2000W reached. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Fry: Press the [🍳] key and the [🍳] indicator lights up. Display will show [240 °] representing that the default temperature is 240°C, and the temperature indicator will light up at 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Congee: Press the [🍲] key and the [🍲] indicator lights up. Display will show [AU]. The power indicators will light up from left to right until 1200W reached, representing that the default power level is at 1200W where it cannot be adjusted. The default operation time is 1 hour. Once finish, a “Beep” will emit and the appliance will return to standby mode. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Steam: Press the [🍲] key and the [🍲] indicator lights up. Display will show [240 °] representing that the default temperature is 240°C, and the temperature indicator will light up at 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. The default operation time is 30 minutes and there are 8 temperature levels in total. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Soup: Press the [🍲] key and the [🍲] indicator lights up, display will show [AU]. The power indicators will light up from left to right until 1200W reached, representing that the default power level is at 1200W where it cannot be adjusted. Default operation time is 2 hours, a “Beep” will emit and the display will show [End]. The appliance will change to keep warm mode and remain in operation for 2 hours. Operation will stop and return to standby mode after keep warm mode is finished. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.
- Warm Milk: Press the [🍲] key and the [🍲] indicator lights up, display will show [AU]. The power indicators will light up from left to right until 600W reached, representing that the default power level is at 600W where it cannot be adjusted. Default operation time is 30 minutes, a “Beep” will emit and the appliance will stop the operation and return to standby mode. To change or cancel this mode, press other function keys or [⏻] key to stop the operation.

**Timer Function** (Only applicable to Hot Pot[☞], Stir-fry[☞], Fry[☞] and Steam[☞] modes)

User can set the cooking time when specific cooking mode is selected. Press the [☞] key once to access the timer function, the [☞] indicator will light up. Display will show the default time [00:00]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

User can press [☞] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time on the display. When the countdown is finished, the operation will stop and change to standby mode after a "Beep". To cancel this function, user can either press the [☞] key to return to standby mode or press and hold the [☞] key by 3 seconds.

**Preset Function** (Only applicable to Congee[☞], Soup[☞] and Warm Milk[☞] modes)

Under standby mode, enter the selection mode by pressing [☞] key. Press [☞] key once to access preset function and the [☞] indicator will light up accordingly. Display will flash and show the default preset time [00:30]. User can press [+] or [-] key to set desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes.

After setting the time, select desired cooking mode and corresponding indicator will light up accordingly. Once confirmed, the appliance will start to countdown by showing the remaining time on the display. A "Beep" will emit after the countdown and the appliance will operate based on desired setting.

The appliance will change to standby mode if no cooking mode is chosen within 1 minute. To cancel this function, press and hold the [☞] key for 3 seconds or change to standby mode by pressing [☞] key.

## 5.7 RIC-GB201E Operation Instructions

After inserting the plug into the socket, a "Beep" will emit and the [☞] indicator will start to flash, indicating the appliance in connection with a power source, known as standby mode. Place a suitable cookware on the centre of the cooking zone. When the [☞] key is pressed, the appliance goes to selection mode and the [☞] indicator remains light up. Press corresponding function keys to start operation. Return to standby mode by pressing [☞] key after cooking.

**Cooking Mode**

- Hot Pot: Press the [☞] key and the [☞] indicator lights up. Display will show [1400] representing that the default power is 1400W, and the power indicators will light up from left to right until 1400W reached. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [☞] key to stop the operation.
- Stir-fry: Press the [☞] key and the [☞] indicator lights up. Display will show [2000] representing that the default power is 2000W, and the power indicators will light up from left to right until 2000W reached. It can be adjusted by pressing the [+] or [-] key to set desired power level. There are 8 power levels in total. To change or cancel this mode, press other function keys or [☞] key to stop the operation.
- Fry: Press the [☞] key and the [☞] indicator lights up. Display will show [240 °] representing that the default temperature is 240°C, and the temperature indicator will light up at 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [☞] key to stop the operation.



- Steam: Press the [ ] key and the [ ] indicator lights up. Display will show [240 °] representing that the default temperature is 240°C, and the temperature indicator will light up at 240°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. The default operation time is 30 minutes and there are 8 temperature levels in total. To change or cancel this mode, press other function keys or [ ] key to stop the operation.
- Soup: Press the [ ] key and the [ ] indicator lights up, display will show [AU]. The power indicators will light up from left to right until 1200W reached, representing that the default power level is at 1200W where it cannot be adjusted. Default operation time is 2 hours, a "Beep" will emit and the display will show [End]. The appliance will change to keep warm mode and remain in operation for 2 hours. Operation will stop and return to standby mode after keep warm mode is finished. To change or cancel this mode, press other function keys or [ ] key to stop the operation.
- Slow cook: Press the [ ] key and the [ ] indicator lights up, display will show [90°] representing that the default temperature is 90°C, and the temperature indicator will light up at 90°C. It can be adjusted by pressing the [+] or [-] key to set desired temperature level. There are 8 temperature levels in total. To change or cancel this mode, press other function keys or [ ] key to stop the operation.

**Timer Function** (Only applicable to Slow cook[ ], Hot Pot[ ], Stir-fry[ ], Fry[ ] and Steam[ ] modes)

User can set the cooking time when specific cooking mode is selected. Press the [ ] key once to access the timer function, the [ ] indicator will light up. Display will show the default time [00:00]. User can press [+] or [-] key to set the desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

User can press [ ] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time on the display. When the countdown is finished, the operation will stop and change to standby mode after a "Beep". To cancel this function, user can either press the [ ] key to return to standby mode or press and hold the [ ] key by 3 seconds.

**Preset Function** (Only applicable to Soup[ ] modes)

Under standby mode, enter the selection mode by pressing [ ] key. Press [ ] key once to access preset function and the [ ] indicator will light up accordingly. Display will flash and show the default preset time [00:30]. User can press [+] or [-] key to set desired time: [-] to set hour and [+] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 23 hours and 59 minutes.

After setting the time, select Soup [ ] mode and the [ ] indicator will light up accordingly. Once confirmed, the appliance will start to countdown by showing the remaining time on the display. A "Beep" will emit after the countdown and the appliance will operate based on desired setting. The appliance will change to standby mode if no cooking mode is chosen within 1 minute. To cancel this function, press and hold the [ ] key for 3 seconds or change to standby mode by [ ] key.

## 5.8 Lock Function (Not applicable to RIC-GM23E Induction Cooker)

The safety lock is deactivated under standby mode. Press [ ] to enter selection mode, press the [ ] key once to lock all the function keys meaning that no operation, power and time adjustment is allowed. To deactivate the lock, press and hold the [ ] key and it will return to selection mode.

To prevent children accidentally operating the appliance or changing the function mode, press [🔒/🔒] key to lock all the function keys (except [🔑] key), where the operating modes, power and time cannot be adjusted. The safety lock indicator will light up during the activation of the safety lock.

If both [Timer] and [Lock] are activated at the same time, display will show the desired time setting but all the function keys are locked (except [🔑] key). Press and hold the [🔒/🔒] key to deactivate the safety lock and resume all the function keys. When the countdown is finished, a “Beep” will emit and the appliance will return to standby mode. User must press and hold the [🔒/🔒] key to deactivate the lock as to resume the operation safety lock.

If user stop the operation directly by pressing the [🔑] key, the safety lock indicator will still light up until deactivation of the lock. User must press and hold the [🔒/🔒] key to resume the operation; otherwise, the lock still in active before next usage. If unplug the power plug, the lock will be deactivated and all the function keys will be unlocked if re-connecting the power again.

## 5.9 Additional Function for Induction Cooker

**Auto temperature constant system** (Applicable to Stir-fry [🔥], Fry [🔥] and Steam [🔥] modes)

Stir-fry [🔥], Fry [🔥] and Steam [🔥] modes have a default temperature value. When the appliance reaches the default temperature, the temperature constant system will operate automatically. The appliance will stop heating as to stabilize the temperature. Indicator light of the selected mode will change from lighting to flashing. The appliance will resume to heat until the temperature decreases to certain value. Therefore, intermittent heating conditions may occur.

**Auto Switch Off Function** (Applicable to Stir-fry [🔥], Fry [🔥], Steam [🔥] and Hot Pot [🔥] modes)

When about 120 minutes elapses without any button being pressed while heating, 5 times of “Beep” will be heard, and then the appliance will be switched off automatically. Use the timer function if heating time more than 120 minutes.

### Cooling Fan Prolong Function

After using the appliance, user can press the [🔑] key to stop the operation. The appliance will change to standby mode and the [🔑] indicator will change from lighting to flashing. **Attention!** It is reminded that the cooling fan will continue to operate in order to suppress the temperature rise inside the cooker. The fan will be automatically turned off when the cooling function is finished. To avoid hazarding or accident from happening, unplug the appliance after the cooling fan is stopped.

### Important Notice

When using Warm Milk [🔥] function, test the temperature of the milk before feeding infant, which is the way to ensure that the temperature is suitable for feeding and to avoid burning the infant's throat. Besides, when using the Congee [🔥] function, stir the ingredients occasionally to avoid scorching at the bottom of cookware; it is suggested that enjoy the congee rapidly before it becomes pasted such that the taste of the congee will not be affected.

### Error Codes

When there are some problems or using the appliance incorrectly, the respective error code will be shown on the digital panel display. Operation will stop and generate discrete warning sound while error code E0 to E7 is shown on display. (Please refer to the check points and remedy shown on **Chapter 6 Troubleshooting and Treatment**.)

## 6. Troubleshooting and Treatment

During operations, if any error occurred, please check the following table before calling for service. Below are common errors and the checks to perform.

| Symptoms  | Check points  | Remedy  |
|---|---|---|
| After connecting the power and pressing the [⏻] key, the appliance has no response. | Is the electricity in suspension?   | Use after resuming the electricity.   |
|   | Is the fuse broken down?  | Check the root causes carefully. If the problem cannot be fixed, please contact Shun Hing Electric Service Centre Ltd. for checking and repairing.  |
|   | Is the plug connected firmly?   |   |
| Heating being interrupted in normal use and a "Beep" will be heard.                 | Incompatible cookware or no cookware is used?   | Replace compatible cookware for the induction cooker.   |
|   | Is the cookware not considerably placed from the center of the heating zone?  | Place the cookware at the center of the defined heating zone.   |
|   | Is the cookware being heated but continually being removed?   | Place a cookware inside the heating zone.   |
| No heating being in use.  | Is the cookware empty or the temperature too high?  | Check whether the appliance is being misused. Try to restart the appliance, or contact Shun Hing Electric Service Centre Ltd. for checking and repairing if necessary.  |
|   | Is the air intake/exhaust air vent clogged or dirt has accumulated?   | To ensure good ventilation, remove the dirt clogging the air intake / exhaust vent.   |
|   | Is the cooker working over 2 hours without any external instruction?  | Reset cooking modes or use timer function.  |
| Error codes occur.  | E0 Internal circuit failure<br>E1 Without cookware or incompatible cookware used<br>E2 Internal overheat<br>E3 Over-voltage<br>E4 Under-voltage<br>E5 Top plate sensor open circuit/short circuit<br>E6 IGBT sensor open circuit/short circuit<br>E7 Top plate overheat | When showing error code E1, E2 and E7, please check whether the cookware is not suitable, or switch on the appliance again after it is cooled down naturally.<br><br>When showing E0, E3-E6, contact Shun Hing Electric Service Centre Ltd. for checking and repairing. |

If the above remedies/solutions cannot fix the problem, unplug the appliance immediately, note the error code and report it to Shun Hing Electric Service Centre Ltd. (Tel: 2406 5666) for checking and repairing. To avoid any danger and damage to the appliance, do not disassemble or repair it by yourself.

---

## 7. Special Avowal

1. This information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and color are subject to the actual appliance.
3. In case there is any inconsistency or conflict between the English versions and Chinese versions of the terms, the Chinese versions shall prevail.
4. The e-copy of user manual can be sent by e-mail on requested. For enquires, please call Shun Hing Electric Works & Engineering Co, Ltd hotline at 2861 2767

## 8. After Sales Service

For any defect, in the judgment of technician from Shun Hing Electric Service Centre Limited, caused under normal use, our company is responsible for repairing or replacing any parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defective part which has been replaced shall become our property. Warranty service does not cover the repair or replacement of parts such as top plate, housing and cookware supplied etc. If the appliance is used improperly, for commercial or semi-commercial use, or not following the instructions in the operation manual, the warranty becomes invalid and our company will refuse any liability and repairing cost for the damage caused.

User must present the official invoice / redemption voucher and the product warranty card (**printed on packing box**) with the chop from sales point / redemption center for maintenance. For enquiries, please call Shun Hing Electric Service Centre Limited hotline at 2406 5666.

# 備忘錄

---



SHUN HING GROUP  
信興集團  
SINCE 1953

**Rasonic 樂信牌**

## 信興電工工程有限公司

**SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.**

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.com>

電郵：[shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, Hong Kong

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.com>

E-mail: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

## 信興電器服務中心有限公司

**SHUN HING ELECTRIC SERVICE CENTRE LTD.**

香港新界葵涌勝耀街2號信興中心11樓

服務熱線: 2406 5666

傳真號碼: 2408 0316

網址: <http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK

Service Hotline: 2406 5666

Fax No.: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心:

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

香港天后琉璃街7號柏景中心22樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F., Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong

Avenida de Venceslau de Morais, No. 193-199, 5 andar - I, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service center, Please visit <http://www.shesc.com/en>